

OWNER'S MANUAL



B2435 - Combination Roller/Ball Bearing Stand

GENERAL SAFETY INSTRUCTIONS

EXTREME CAUTION SHOULD BE USED IN OPERATING ALL POWER TOOLS. KNOW YOUR POWER TOOL, BE FAMILIAR WITH ITS OPERATION. READ THE OWNER'S MANUAL AND PRACTICE SAFE USAGE PROCEDURES AT ALL TIMES.

- **CONNECT** your machine **ONLY** to the matched and specified power source.
- □ WEAR SAFETY GLASSES, RESPIRATORS, HEARING PROTECTION and SAFETY SHOES when operating this machine.
- **DO NOT** wear loose clothing or jewellery when operating machinery.
- □ A Safe Environment is important. Keep the area free of dust, dirt and other debris in the immediate vicinity of the machine.
- **BE ALERT!** Do Not Use prescription or other drugs that may affect your ability or judgement to safely use this machine.
- DISCONNECT the power source when changing drill bits, hollow chisels, router bits, shaper heads, blades, knives or making other adjustments or repairs.
- □ **NEVER** leave an operating tool unattended.
- NEVER reach over the table when the tool is in operation.
- NEVER make crosscuts with the rip fence in place.
- □ **NEVER** attempt cut material that is warped or twisted.
- ALWAYS keep blades, knives or bits sharp and properly aligned.
- ALWAYS keep all safety guards in place and ensure their proper function.
- ALWAYS use push sticks and featherboards to safely feed your work through the machine.
- ALWAYS make sure that any tools used for adjustments are removed before operating the machine.
- □ **ALWAYS** secure your work with the appropriate clamps or vises.
- ALWAYS keep bystanders safely away while operating machinery.
- □ THINK SAFETY. WORK SAFELY. Never attempt a procedure if it does not feel safe or comfortable.



B2435 ROLLER/BALL STAND PARTS





B2435 ROLLER/BALL STAND ASSEMBLY INSTRUCTIONS


Remove the bolts and lock nuts from the leg assembly.

Place the post in the pocket of the leg assembly and use the lock nuts and bolts to fasten the tripod leg.

The post and the lock lever should be placed with the lever between the two legs of the leg assembly.

Set the post so that there is approximately 2" are below the bottom of the leg assembly.

Tighten the nuts.

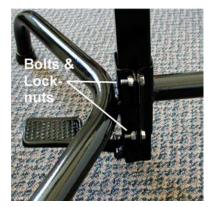

Remove the two bolts, flat washers and lock washers from the roller/ball assembly.

Place the roller/ball assembly into the bracket on top of the post. Install the flat washer, lock washer and bolts into the threaded holes under the bracket and tighten securely.



Push Down to Release Locking

Pedal

OPERATING INSTRUCTIONS

The lock lever pedal must be pressed to release the post for either raising or lowering the unit.

To switch from the roller balls to the long roller, simply rotate the roller assembly.







CRAFTEX 1 YEAR LIMITED WARRANTY

Craftex warrants every product to be free from defects in materials and agrees to correct such defects where applicable. This warranty covers <u>one year</u> for parts and 90 days for labour (unless specified otherwise), to the original purchaser from the date of purchase but does not apply to malfunctions arising directly or indirectly from misuse, abuse, improper installation or assembly, negligence, accidents, repairs or alterations or lack of maintenance.

Proof of purchase is necessary.

All warranty claims are subject to inspection of such products or part thereof and Craftex reserves the right to inspect any returned item before a refund or replacement may be issued.

This warranty shall not apply to consumable products such as blades, bits, belts, cutters, chisels, punches etceteras. Craftex shall in no event be liable for injuries, accidental or otherwise, death to persons or damage to property or for incidental contingent, special or consequential damages arising from the use of our products.

RETURNS, REPAIRS AND REPLACEMENTS

To return, repair, or replace a Craftex product, you must visit the appropriate Busy Bee Tools showroom. Craftex is a brand of equipment that is exclusive to Busy Bee Tools.

For replacement parts directly from Busy Bee Tools, for this machine, please call 1-800-461-BUSY(2879), and have your credit card and part number handy.

- All returned merchandise will be subject to a minimum charge of 15% for re-stocking and handling with the following qualifications.
- Returns must be pre-authorized by us in writing.
- We do not accept *collect* shipments.
- Items returned for warranty purposes must be insured and shipped pre-paid to the nearest warehouse (see locations on inside back cover of this manual).
- Returns must be accompanied with a copy of your original invoice as proof of purchase. Returns must be in an un-used condition and shipped in their original packaging a letter explaining your reason for the return. Incurred shipping and handling charges are not refundable.
- Busy Bee will repair or replace the item at our discretion and subject to our inspection.
- Repaired or replaced items will be returned to you pre-paid by our choice of carriers.
- Busy Bee reserves the right to refuse reimbursement or repairs or replacement if a third party without our prior authorization has carried out repairs to the item.
- Repairs made by Busy Bee are warranted for 30 days on parts and labour.
- Any unforeseen repair charges will be reported to you for acceptance prior to making the repairs.
- The Busy Bee Parts & Service Departments are fully equipped to do repairs on all products purchased from us with the exception of some products that require the return to their authorized repair depots. A Busy Bee representative will provide you with the necessary information to have this done.
- For faster service it is advisable to contact the nearest Busy Bee location for parts availability prior to bringing your product in for repairs.



BUSY BEE TOOLS - - - SHOWROOMS - Coast to Coast

Head Office

355 Norfinch Drive, North York, Ontario, M3N 1Y7 Tel. - 416-665-8008, Fax – 416-665-8337

Mississauga

6325 Dixie Rd. Unit 6 & 7, Mississauga, Ontario, L5T 2E5 Tel. – 905-795-3200, Fax – 905-795-0091

Ottawa

2251 Gladwin Crescent, Ottawa, Ontario, K1B 4K9 Tel. – 613-526-4696, Fax – 613-731-8636

London

1398 Wellington Road, London, Ontario, N5E 1M5 Tel. – 519-659-9868, Fax – 519-659-0771

Barrie

21 Commerce Park Drive, Barrie, Ontario, L4N 8X1 Tel. – 705-730-0498, Fax – 705-730-0495

Dartmouth

133 Ilsley Avenue, Dartmouth, Nova Scotia, B3B 1S9 Tel. – 902-468-8088, Fax – 902-468-8830

Vancouver

30 Braid Street, New Westminister, British Columbia, V3L 3P3 Tel. – 604-517-3922, Fax – 604-517-8272

Pickering

1064 Salk Road, Pickering, Ontario, L1W 4B5 Tel. – 905-831-9582, Fax – 905-831-4292

We have been serving the Canadian woodworking and metalworking industry for over 26 proud years. We stand behind our machines. If you have any questions, comments, or concerns, please call or write to our head office or call toll free at 1-800-461-BUSY.

Email us at <u>busybee@busybeetools.com</u> or contact us though our web site at www.busybeetools.com