



OWNER'S MANUAL



CT058 – 8" JOINTER



COPYRIGHT © 2003 BY CRAFTEX INDUSTRIES INC.

NO PORTION OF THIS MANUAL MAY BE REPRODUCED WITHOUT
THE WRITTEN CONSENT OF CRAFTEX INDUSTRIES INC.



CT058 8" JOINTER

Index

General Safety Instructions	Page 3
Specific Safety Instructions	Page 4
CT058 Jointer Features	Page 5
Illustrated Features	Page 6
Unpacking	Page 7
Assembly	
Assembling Jointer to Cabinet base	Page 8
Installing Drive Belts	Page 8
Installing Drive Belts, Continued	Page 9
Cutter Head Guard	Page 9
Knife Assembly	Page 10
Replacing Knives	Page 10
Adjusting the Fence	Page 11
Adjusting Infeed Table	Page 11
Adjusting Outfeed Table	Page 12
Installing Magnetic Switch	Page 13
Electrical	Page 14
<u>Operation</u>	
Jointing	Page 15
Planing Safely	Page 16
Rabbeting	Page 17
Honing Knives	Page 18
Cutter Head Removal	Page 19
<u>Schematic & Parts Listing</u>	
Schematic – Body	Page 20
Parts List – Body	Page 21
Schematic – Base	Page 22
Parts List – Base	Page 23
Warranty Information	Page 24

GENERAL SAFETY INSTRUCTIONS

EXTREME CAUTION SHOULD BE USED IN OPERATING ALL POWER TOOLS. KNOW YOUR POWER TOOL, BE FAMILIAR WITH ITS OPERATION. READ THE OWNER'S MANUAL AND PRACTICE SAFE USAGE PROCEDURES AT ALL TIMES.

- ❑ **CONNECT** your machine **ONLY** to the matched and specified power source.
- ❑ **WEAR SAFETY GLASSES, RESPIRATORS, HEARING PROTECTION and SAFETY SHOES** when operating heavy machinery. **Always wear safety glasses.**
- ❑ **DO NOT** wear loose clothing or jewellery when operating machinery.
- ❑ **A Safe Environment is important.** Keep the area free of dust, dirt and other debris in the immediate vicinity of the machine.
- ❑ **BE ALERT!** Do Not Use prescription or other drugs that may affect your ability or judgement to safely use this machine.
- ❑ **NEVER** leave an operating tool unattended.
- ❑ **NEVER** reach over the table when the tool is in operation.
- ❑ **ALWAYS** keep blades, knives or bits sharp and properly aligned.
- ❑ **ALWAYS** keep all safety guards in place and ensure their proper function.
- ❑ **ALWAYS** use push sticks and featherboards to safely feed your work through the machine.
- ❑ **ALWAYS** make sure that any tools used for adjustments are removed before operating the machine.
- ❑ **ALWAYS** keep bystanders safely away while operating machinery.
- ❑ **THINK SAFETY. WORK SAFELY.** Never attempt a procedure if it does not feel safe or comfortable.

CT058 JOINTER

SPECIFIC SAFETY INSTRUCTIONS

- ❑ Always keep the cutter head knives sharp and free of rust, tar and pitch
- ❑ Always use push blocks when jointing stock that does not provide a reasonable distance of safety for your hands.
- ❑ Never allow your hands to pass directly over the cutter head.
- ❑ Always make sure that the exposed cutter head *behind* the fence is guarded particularly when jointing near the leading edge such as in rabbetting.
- ❑ Never perform jointing operations on wood materials shorter than 8", narrower than 3/4" or less than 1/4" in thickness.
- ❑ Do not perform *planing* operations on wood material shorter than 4", narrower than 3/4", wider than 8" or thinner than 1/2".
- ❑ Maintain the proper relationship of the infeed and outfeed table surfaces and the cutter head knife path.
- ❑ Never *back* your workpiece into the spinning cutter head.
- ❑ Never make cuts deeper than 1/16" in a single pass to prevent overloading the machine and to prevent dangerous kickback.

CT058 8" JOINTER


Features

As part of the growing line of Craftex woodworking equipment, we are proud to offer the CT058. The Craftex name guarantees Craft Excellence. By following the instructions and procedures laid out in this owner's manual, you will receive years of excellent service and satisfaction. The CT058 is a professional tool and like all power tools, proper care and safety procedures should be adhered to.

- ❑ Motor – 1 1/2 HP, Single Phase, Ball Bearing Mounted.
- ❑ Dual Belt Drive.
- ❑ Magnetic Switch.
- ❑ Extra Long Bed, 65" x 9".
- ❑ Heavy-Duty, Cast-Iron, Precision Ground Tables Mounted on Inclined Dovetail Ways.
- ❑ Precise Gib Adjustments.
- ❑ Quick-Adjust Levers for infeed and outfeed tables.
- ❑ Positive Fence stops at 90 and 45 degrees.
- ❑ Totally Enclosed Cabinet with built-in chip chute.
- ❑ Three-knife Balanced Ball Bearing Cutter Head.
- ❑ Maximum Cutting Depth – 1/2".
- ❑ Cutter Head Speed – 5,000 RPM.
- ❑ Dual Belt Drive.
- ❑ Weight – 220 kg.
- ❑ 2 Push Pads Included.
- ❑ 2 Year Warranty.

CT058 8" JOINTER

Illustrated Features

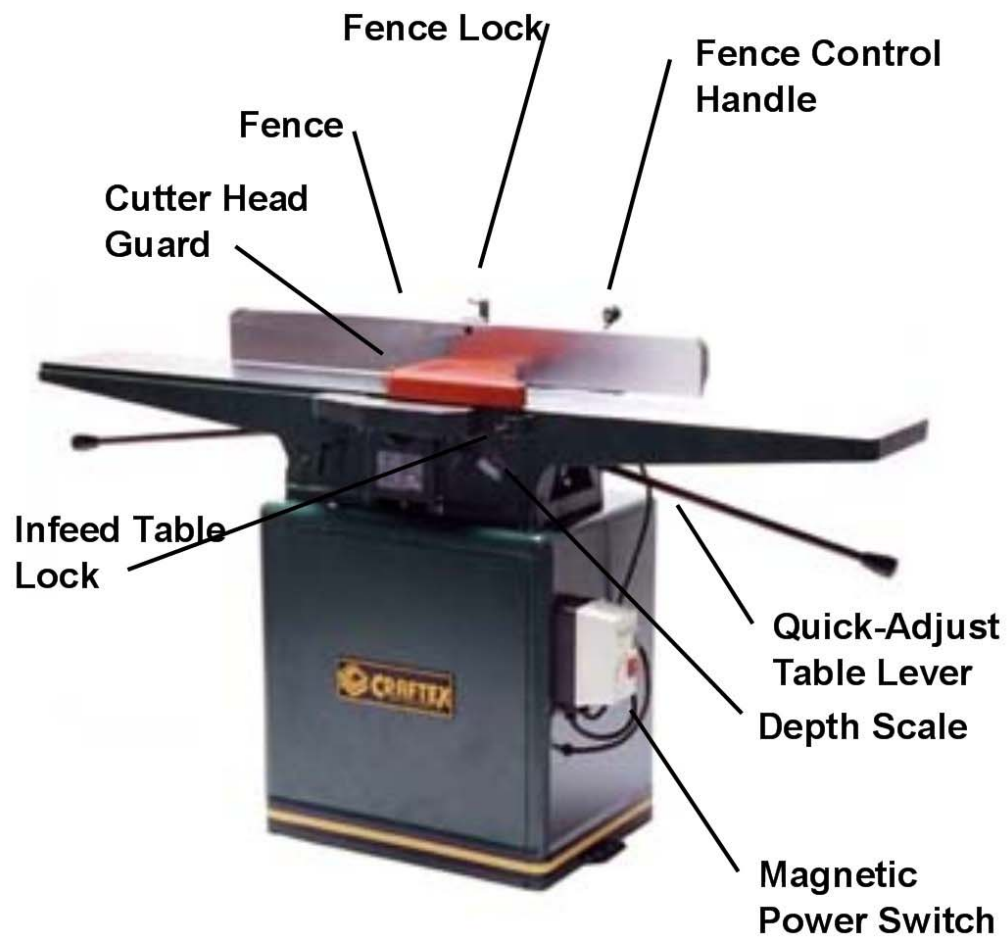


CT058 8" JOINTER

Unpacking


The Crafttex CT058, 8" Jointer is shipped in two cartons, one containing the sheet metal cabinet base and motor and the other containing the jointer and other small components.

Carefully remove all of the packing material and recycle where available. Safety glasses and work gloves should be worn when un-packing as there may be sharp corners, nails or other sharp objects that could cause personal injury.

Open all of the cartons or packages and remove the contents. Set the contents aside and see that the packages are empty before discarding them.

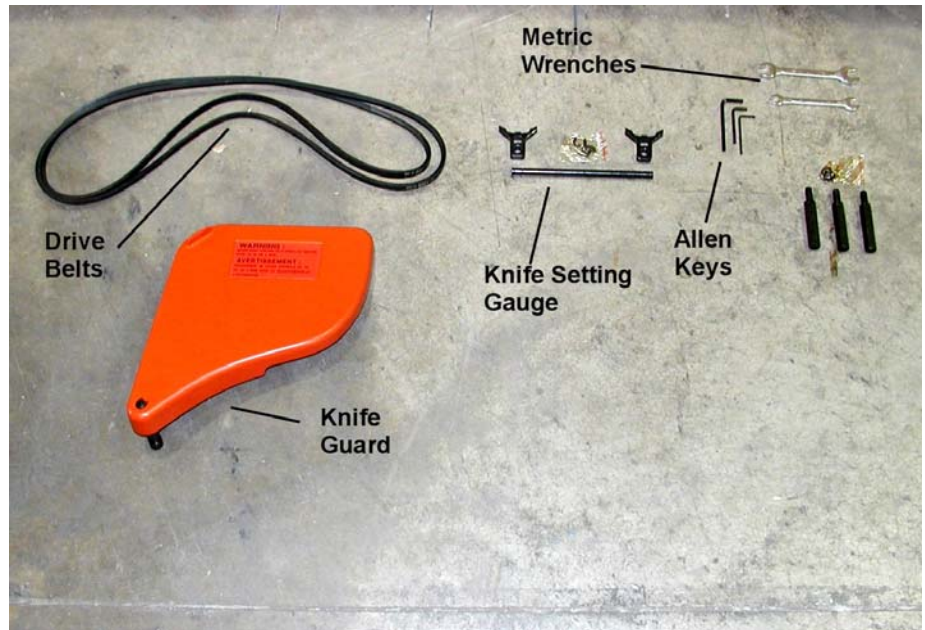

The CT058 Jointer is shipped with a protective coating on the cast-iron parts to protect them from corrosion. This coating should be removed prior to assembly using a cloth and mineral spirits. Wipe all surfaces clean and dry them thoroughly. When the parts are dry, apply a generous coat of paste wax and buff dry. This will help prevent future corrosion.

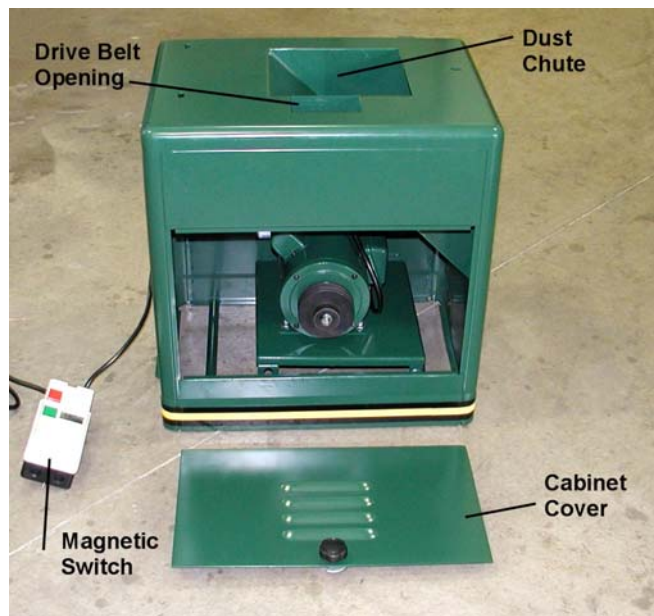

(Base Components)

CT058 8" JOINTER

Assembly


Assembling the Jointer to the Cabinet Base

Place the sheet metal Cabinet Base in close proximity to where you plan to finally place the CT058 Jointer.

Place the Jointer on the Cabinet Base being sure that the cabinet top cutter head opening is on the same side as the motor pulley.

CAUTION: The CT058 Jointer is heavy and should be lifted by more than one person or with a mechanical aid.


There are 3 hex-head screws with lock washers in the parts package and these should be used to secure the Jointer to the Cabinet Base. These should be fastened from below and up through the cabinet.

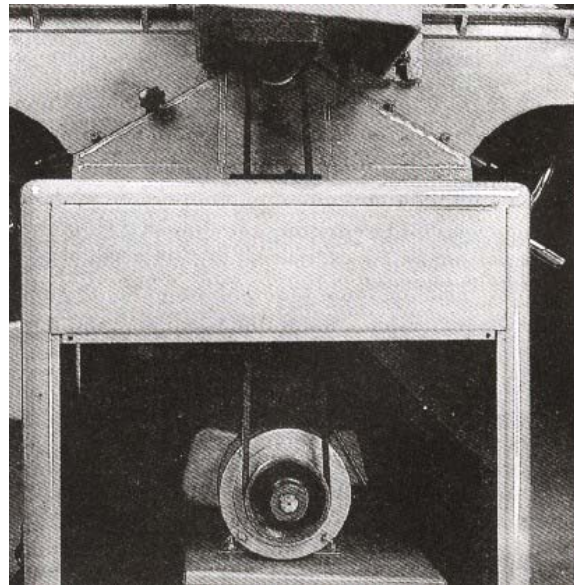

Installing/Adjusting the Drive Belts

Remove the Upper Drive Belt Pulley Cover to gain access to the Drive Pulleys.

Fit the two Drive belts on the Motor Drive Pulley and then feed the belts up through the Base Cabinet and over the Cutter Head drive Pulleys.

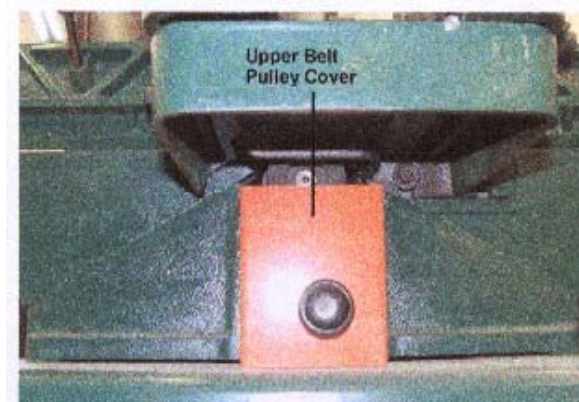


CT058 8" JOINTER

Assembly, Continued


Installing/Adjusting Drive Belts, Continued

Should the drive belts be too tight, loosen the adjustment screws on the motor-mount base

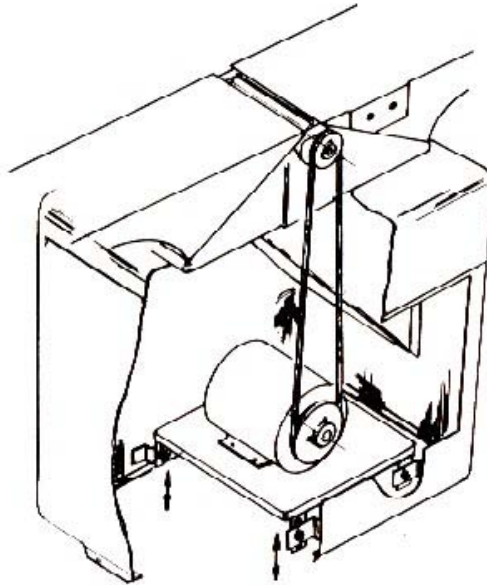

Cutter Head Guard

The shaft of the Cutter Head Guard fits into the socket on the side edge of the infeed table. Loosen the locking screw, insert the shaft and tighten the screw.

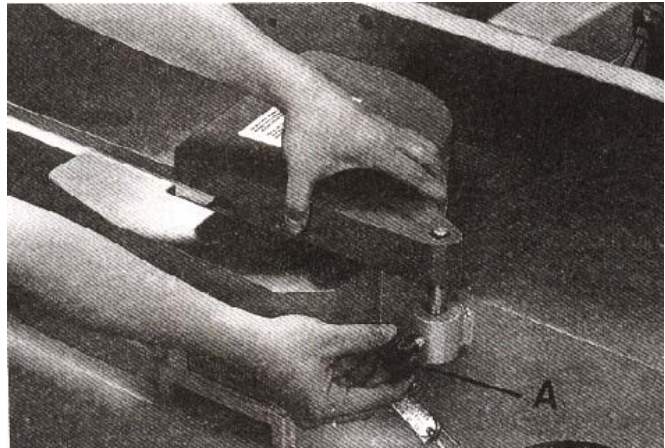


CT058 8" JOINTER

Assembly, Continued

Cutter Head Knife Assembly.

- A – Knife Gauge
- B – Gauge Protrusion
- C – Locking Bar
- D – Locking Screws
- E – Springs
- F - Knife

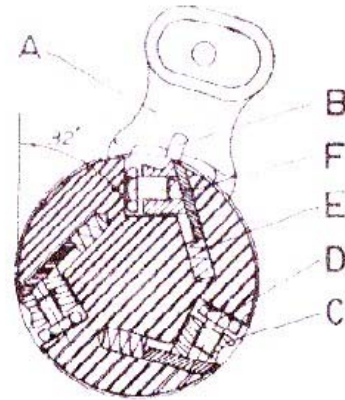


Replacing Knives

Disconnect the CT058 Jointer from its power source.

Loosen the 5 Allen knife setting screws starting with the centre one followed by the two end screws and the remaining ones.

Carefully remove the knife and the locking bar being careful not to lose any of the five-knife pressure springs.

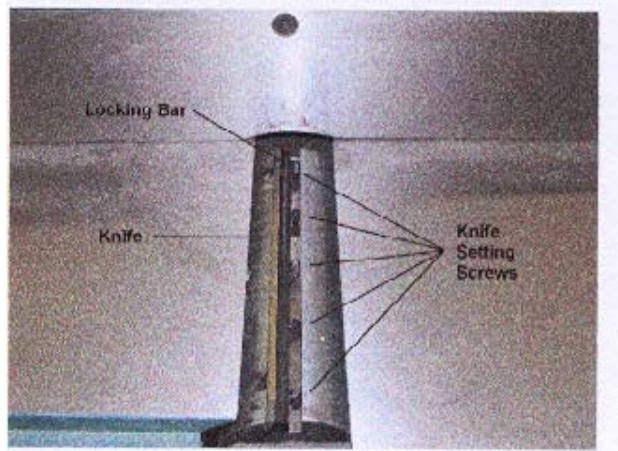

Repeat this procedure for the remaining two knives.

Reassemble the knives in reverse order but be certain to replace the knives with their sharp edges facing the infeed table.

Do not tighten the Allen screws until you have placed the knife-setting gauge on the cutter head with the protrusion on the knife's edge.

Tighten the Allen Screws in the reverse order to the above being certain that all are tight.

CT058 8" JOINTER


Assembly, Continued

Adjusting the Fence

With the fence in the 90-degree position, use a combination square to determine if the fence is square to the tables. Should this not be so, loosen the Fence Locking Levers and adjust the 90-degree Adjusting Screw. Tighten the Locking Levers.

To adjust the fence in the 45-degree position, repeat the above steps but with the fence set in the 45-degree position. Use the 45-degree Adjusting Screw to make any corrections. Tighten the Locking Levers.

Moving the fence angle or to move it forwards or backwards, use the Fence Handle.

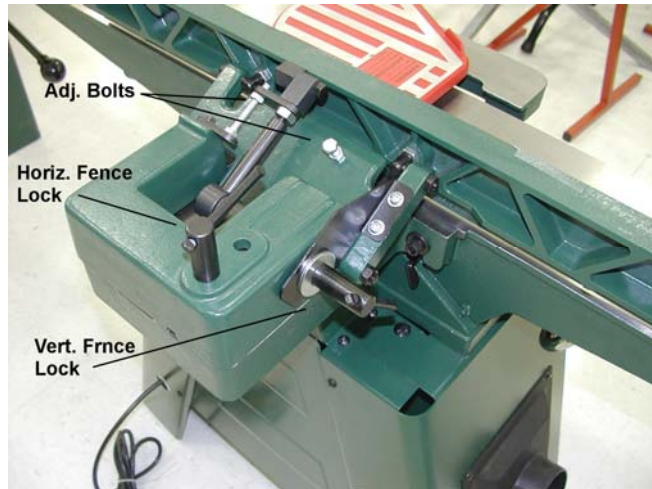

Adjusting the Infeed Table

Adjusting the Infeed Table is a simple process. Simply loosen the Infeed Table Lock, grasp the Quick-Adjust Lever and raise or lower the Infeed Table to the desired position. There is a Depth Scale to indicate the depth of the cut.


Caution: Never attempt to remove more than 1/16" of material in a single pass.

CT058 8" JOINTER

Assembly, Continued

Adjusting the Outfeed Table

For accurate results from your Craftex CT058 Jointer, the Outfeed Table *must* be perfectly level with the Cutter Head Knives at their highest point. The knives must be parallel to the table and project equally from the Cutter Head.

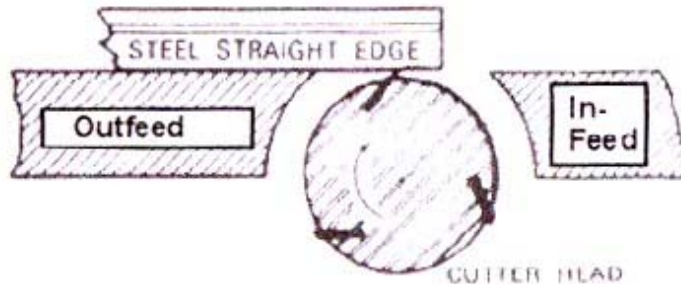

To achieve this, loosen the Outfeed Table Lock and remove the Upper Pulley Cover on the rear of the Jointer.

Method For Checking Outfeed Table
Elevation and Knife Alignment

Using a straight –edge, lay it across the Outfeed Table where the Cutter Head opening is located.

Rotate the Cutter Head slowly by hand by turning the Upper Drive Belt Pulley.

The knife-edges must *just touch* the straight edge. If one knife appears to high, it must be re-set. Loosen the five lock screws on the cutter head for that particular knife. Start with the centre screw, followed by the end screws and then the remaining two. Set your straight edge on the centre of the knife, snug that screw, move the straight edge to the back and repeat. Bring the straight edge to the front and repeat. When it is determined that the knife is parallel on its full length, secure the set screws.

If all of the knives appear to be too high or low, loosen the Outfeed Table Lock and raise or lower the table with the Quick-Adjust Outfeed Table Lever and adjust accordingly. Tighten the Outfeed Table Lock securely.

CT058 8" JOINTER


Assembly, Continued

Installing the Magnetic Power Switch

The Magnetic Power Switch carton contains the wiring Schematic for the motor supplied with the CT058 Jointer.

Feed the wires to the motor through the hole provided in the lower side of the Cabinet Base.

Mount the Magnetic Power Switch on the lower side of the Cabinet Base as indicated.

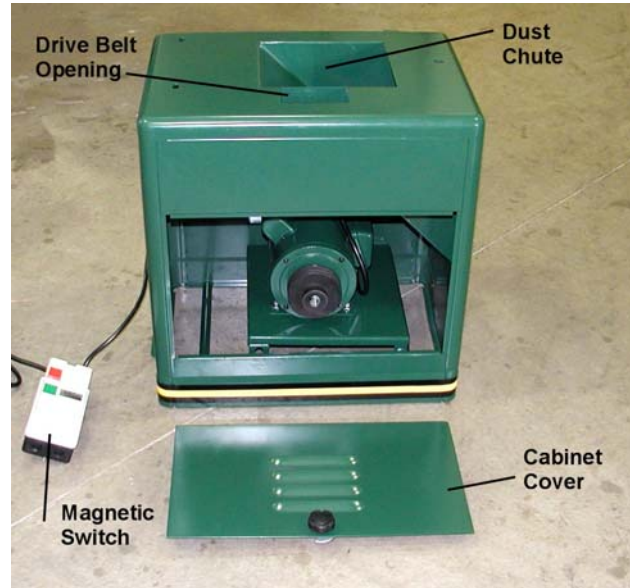


CT058 8" JOINTER

Electrical

A qualified electrician should be employed to make the electrical connections for the CT058 Jointer.

Make sure that the electrical characteristics match the motor nameplate and the power source. Also make sure that the jointer is used on a properly fused circuit and that the correct wire size is employed.

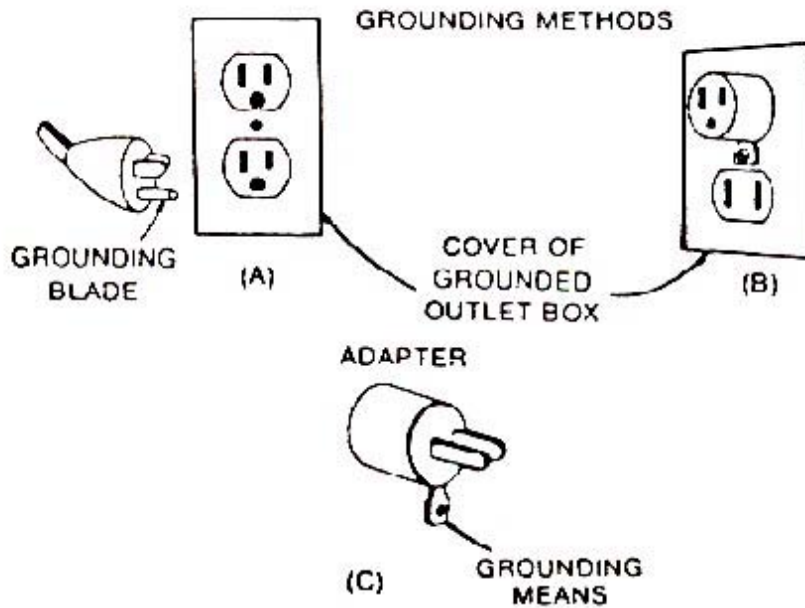


CT058 8" JOINTER

Operation


Jointing

For the best results from your CT058 Jointer it is important to feed your workpiece *with* the grain of the wood.

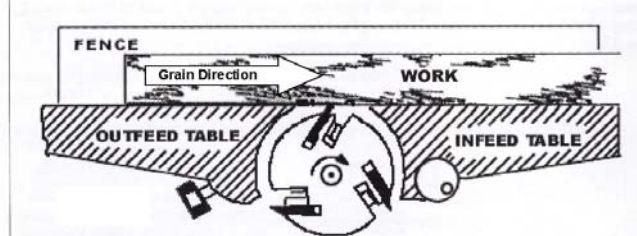


Proper adjustment of both the Infeed and the Outfeed Tables will provide the best results.


If the Outfeed Table is too high the finished surface will be curved.

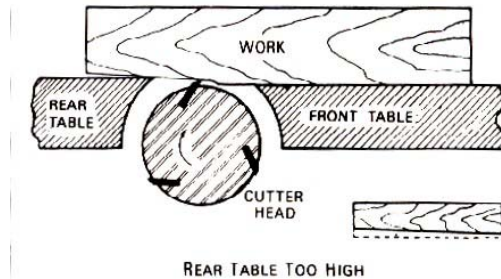

If the Outfeed Table is too low, the finished surface will be gouged.

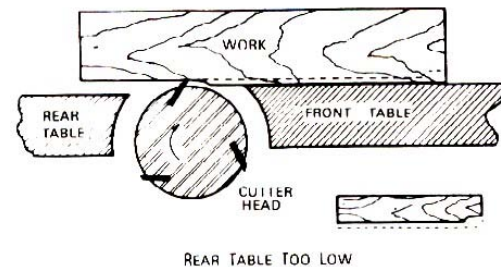

Correctly setting the Tables will result in perfect jointing.

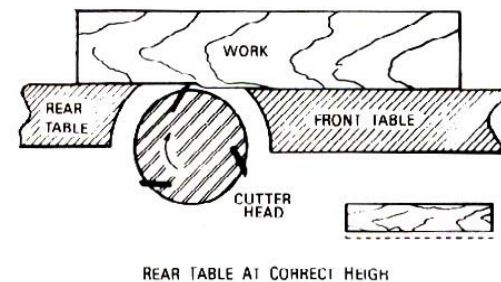


CT058 8" JOINTER


Operation, Continued

Planing Safely

For edge planing, hold the workpiece as illustrated being sure to keep your fingers well above the table surface.

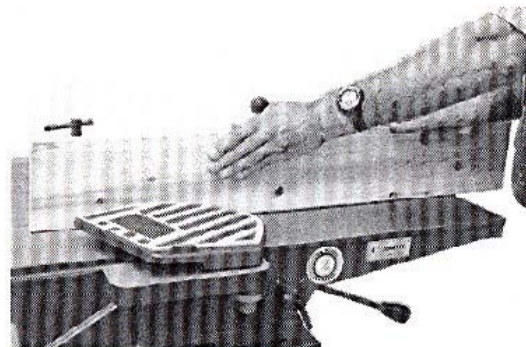

Should the workpiece be too small to safely use your hands, use push pads or push sticks as illustrated.

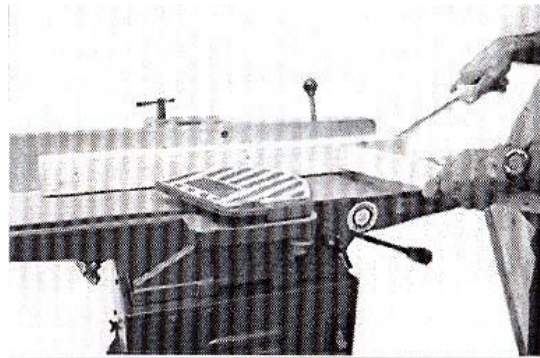

CT058 8" JOINTER

Operation, Continued

Rabbeting



To make a rabbet on a workpiece, bring the fence forward to the required distance from the outer edge of the infeed table and the required distance from the edge of the cutter head.

Lower the infeed table for the first pass.

Remove the knife guard.

Do Not attempt to make a full rabbet in one pass, several small passes will result in better work.

Replace the blade guard when your rabbeting work is complete.

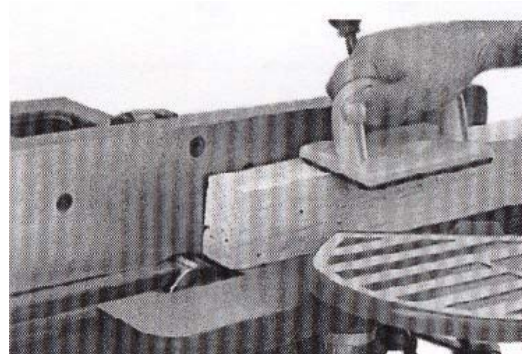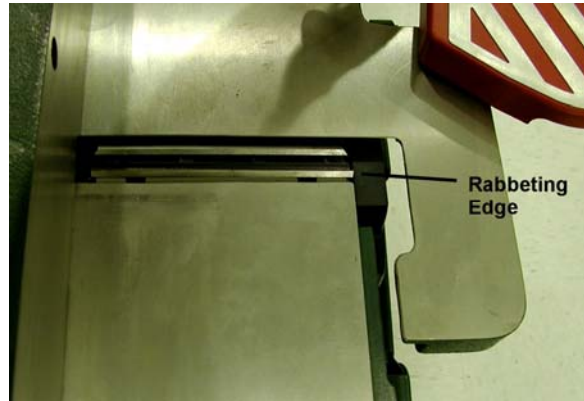

CT058 8" JOINTER Operation, Honing

Honing Knives

The Craftex CT058 Jointer must be maintained on a regular basis and one of these maintenance operations is keeping the planer knives sharp. Dull, dirty or nicked knives will produce poor jointing results. The knives should be routinely checked.


If the knives are simply dull, you can restore the edge by honing the knives in place. Knives can be honed a number of times before they must be removed for re-grinding. Should a small nick appear in the knife edges, the effect of this (a small ridge on the workpiece) may be removed by moving one of the knives slightly to the left or right.

Honing is best achieved with the **Busy Bee B1659 Jointer Knife Honing Tool**. A simple and effective tool.



Disconnect the power supply

- ❑ Remove the fence or slide it back fully to expose *all* of the knife-edges.
- ❑ Remove the blade guard.
- ❑ Clean the knife and cutter head with mineral spirits to remove pitch, gum and tar. Wipe the parts dry.
- ❑ Wedge a small piece of wood between the cutter head and the frame to keep the cutter head from moving while you are honing the knives.
- ❑ Place a couple of drops of honing oil on the honing stone and draw it across the *full* length of the knife being certain the stone makes full contact with the blade.
- ❑ Start the process with the coarse stone and finish with the finer stone.
- ❑ Remove any traces of honing oil when completed.
- ❑ Replace the cutter head guard and then make a few test cuts.

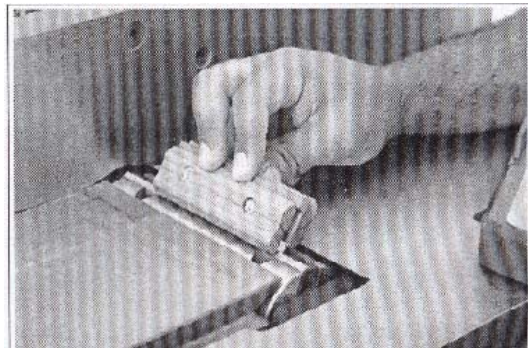

CT058 8" JOINTER


Operation, Continued

Cutter Head Removal


When it is necessary to remove the cutter head assembly for maintenance, the following procedures should be followed.

Disconnect the CT058 from the power source.

- ❑ Remove the fence.
- ❑ Remove the drive belts.
- ❑ Set both the infeed and outfeed tables to their lowermost positions, being sure to loosen the butterfly lock screws first.
- ❑ Remove the two bearing cap screws.
- ❑ From the drive belt end, carefully slide the cutter head assembly out.
- ❑ Reverse the above procedures to reinstall the assembly.

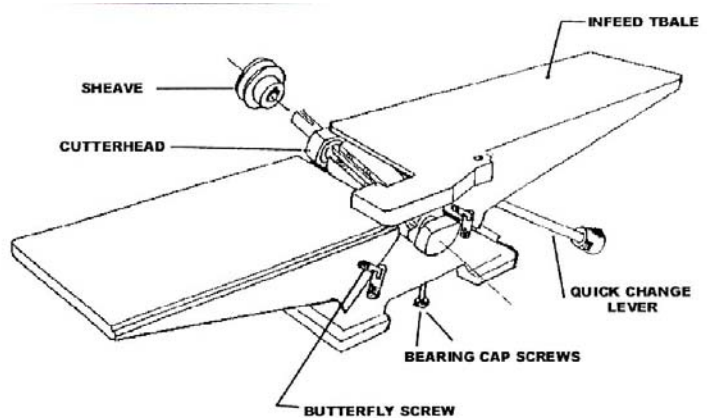


CT058 8" JOINTER Schematic - Body

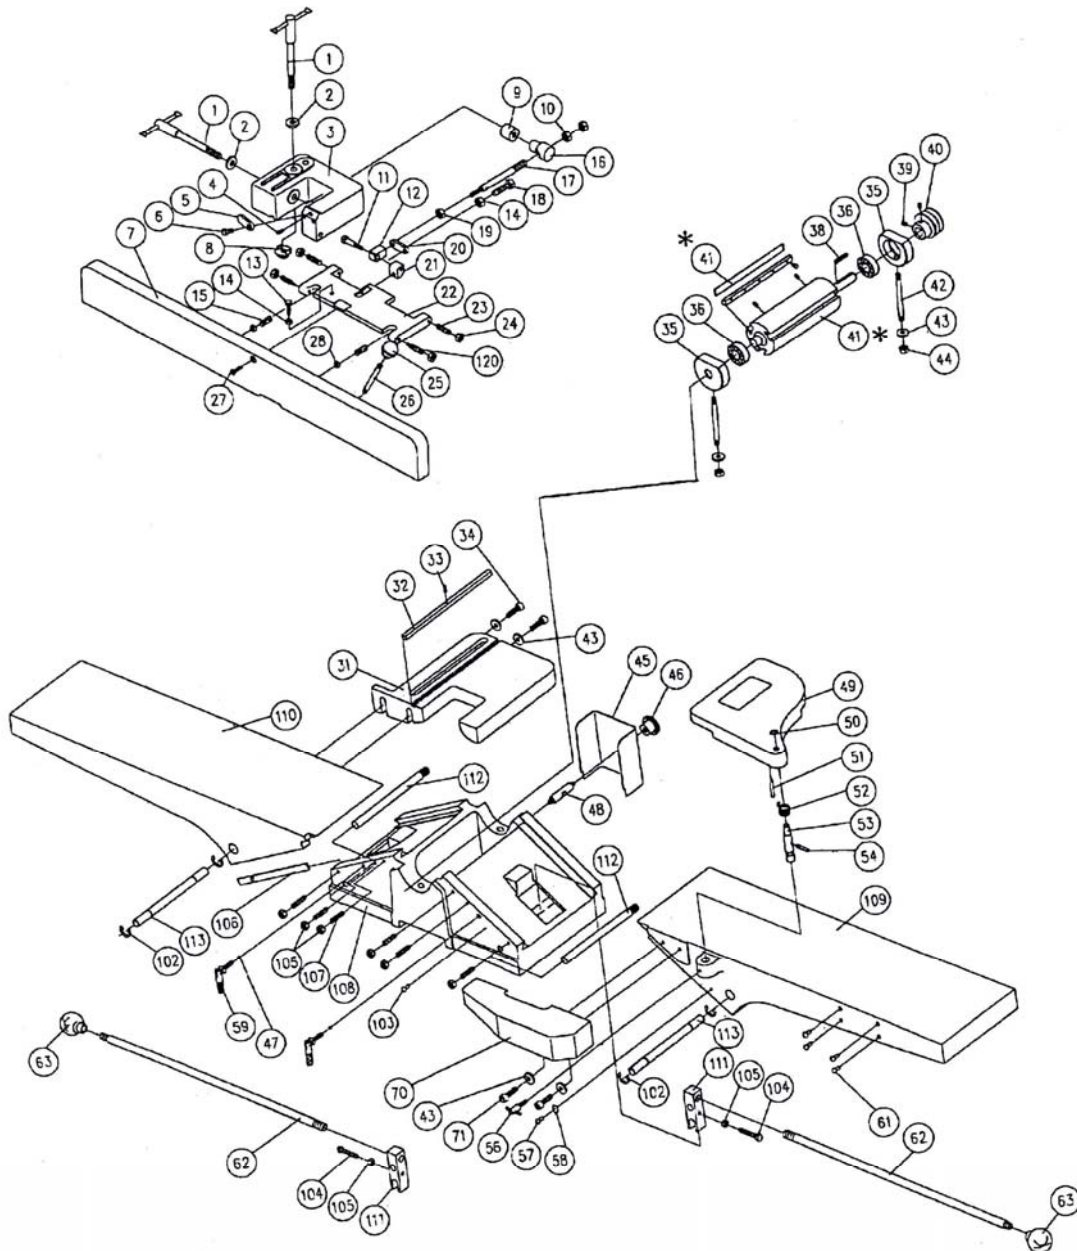

PARTS LIST FOR CT058 8" JOINTER	
1 LOCK BOLT	66
2 WASHER	67
3 SUPPORTER	68
4 KEY	69
5 BRACKET	70 BRACKET
6 SCREW	71 CAP SCREW
7 FENCE	72 BOLT
8 NUT	73 SCREW
9 SPACER	74 LOCKER
10 NUT	75 NUT
11 SCREW	76 SPRING WASHER
12 CONNECTER	77 BOLT
13 SCREW	78
14 NUT	79 NUT
15 BOLT	80 STAR WASHER
16 SET BASE	81 WASHER
17 SET ROD	82 SCREW
18 SCREW	83 BELT
19 NUT	84 WIRE
20 SET BRACKET	85 SWITCH
21 CONNECT BASE	86 WIRE LOCKER
22 ROD	87 WASHER
23 BOLT	88 POWER CORD
24 NUT	89 MOTOR
25 HANDLE	90 SET SCREW
26 BAR	91 KEY
27 SCREW	92 WHEEL
28 NUT	93 WASHER
29 WASHER	94 SCREW
30 BOLT	95 MOTOR BASE
31 SUPPORTER	96 SIDE PLATE
32 KEY	97 PLATE
33 SPRING KEY	98 STAND
34 CAP SCREW	99 E-RING
35 BEARING BASE	100 GAUGE
36 BEARING	101 ROD
37	102 E-RING
38 KEY	103 RIVET
39 SET SCREW	104 SCREW
40 WHEEL	105 NUT
41 BLADE ARBOR	106 LONG KEY
42 BOLT	107 SET SCREW
43 WASHER	108 BASE

CT058 8" JOINTER Schematic - Base

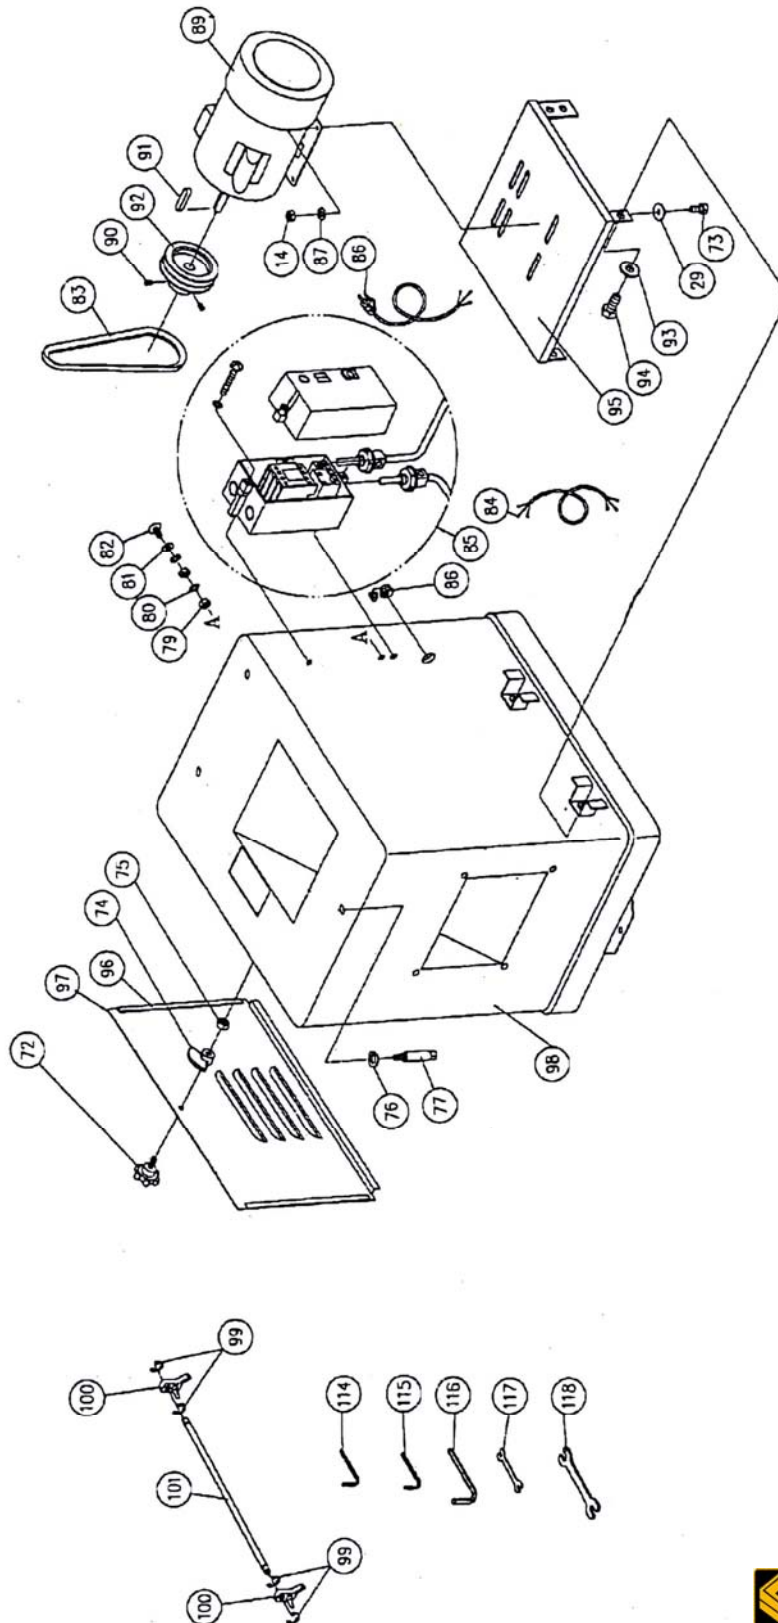

CT058 8" JOINTER

Parts List - Base

44 NUT	109 FRONT TABLE
45 COVER	110 BACK TABLE
46 NUT	111 BRACKET
47 BALL	112 ROD
48 BOLT	113 SUPPORT ROD
49 BLADE GUARD	114 HEX. WRENCH
50 S-RING	115 HEX. WRENCH
51 SPRING KEY	116 HEX. WRENCH
52 SPRING KEY	117 WRENCH
53 COVER SPINDLE	118 WRENCH
54 SPRING KEY	
55	
56 LOCK BOLT SET	
57 SCREW	
58 INDEX	
59 LOCK BOLT	
60	
61 RIVET	
62 HANDLE BAR	
63 HANDLE	
64	
65	



CRAFTEX 2 YEAR LIMITED WARRANTY

Craftex warrants every product to be free from defects in materials and agrees to correct such defects where applicable. This warranty covers **two years** for parts and 90 days for labour (unless specified otherwise), to the original purchaser from the date of purchase but does not apply to malfunctions arising directly or indirectly from misuse, abuse, improper installation or assembly, negligence, accidents, repairs or alterations or lack of maintenance.

Proof of purchase is necessary.

All warranty claims are subject to inspection of such products or part thereof and Craftex reserves the right to inspect any returned item before a refund or replacement may be issued.

This warranty shall not apply to consumable products such as blades, bits, belts, cutters, chisels, punches etceteras.

Craftex shall in no event be liable for injuries, accidental or otherwise, death to persons or damage to property or for incidental contingent, special or consequential damages arising from the use of our products.

RETURNS, REPAIRS AND REPLACEMENTS

To return, repair, or replace a Craftex product, you must visit the appropriate Busy Bee Tools showroom. Craftex is a brand of equipment that is exclusive to Busy Bee Tools.

For replacement parts directly from Busy Bee Tools, for this machine, please call 1-800-461-BUSY(2879), and have your credit card and part number handy.

- All returned merchandise will be subject to a minimum charge of 15% for re-stocking and handling with the following qualifications.
- Returns must be pre-authorized by us in writing.
- **We do not accept collect shipments.**
- Items returned for warranty purposes must be insured and shipped pre-paid to the nearest warehouse (see locations on inside back cover of this manual).
- Returns must be accompanied with a copy of your original invoice as proof of purchase. Returns must be in an un-used condition and shipped in their original packaging a letter explaining your reason for the return. Incurred shipping and handling charges are not refundable.
- Busy Bee will repair or replace the item at our discretion and subject to our inspection.
- Repaired or replaced items will be returned to you pre-paid by our choice of carriers.
- Busy Bee reserves the right to refuse reimbursement or repairs or replacement if a third party without our prior authorization has carried out repairs to the item.
- Repairs made by Busy Bee are warranted for 30 days on parts and labour.
- Any unforeseen repair charges will be reported to you for acceptance prior to making the repairs.
- The Busy Bee Parts & Service Departments are fully equipped to do repairs on all products purchased from us with the exception of some products that require the return to their authorized repair depots. A Busy Bee representative will provide you with the necessary information to have this done.
- For faster service it is advisable to contact the nearest Busy Bee location for parts availability prior to bringing your product in for repairs.

