



CX101
18" VARIABLE SPEED
WOOD & METAL BAND SAW
User Manual



Table of Contents

General Safety Instructions	3
Specific Safety Instructions	4
Features	5
Physical Features	6
Setup	7
Un-packing	7
Proper Grounding	8
Assembly and Adjustments	9
Blade Tracking	12
Basic Controls	13
Test Run	13
Blade Tension	14
Adjusting the Blade Tension	14
Guide Bearings Adjustment	14
Table Stop Adjustment	15
Table Tilt Scale Calibration	16
Table Alignment	16
Guide Post	17
Work-Piece Inspection	17
Work-Piece Inspection (Metal)	18
Blade Selection (Metal)	18
Cast Iron Wheels	19
Coplanar Adjustment	19
Operations	20
Ripping	20
Cross Cutting	20
Re-Sawing	21
Cutting Curves	21
Connecting to a Dust Collector	21
Maintenance	22
Removing/Installing Blade	22
Blade & Table Alignments	22
Tilting the table Backward	23
Table and Base	23
V-Belts	23
Removing/Replacing the V-Belts	24
Optional Accessories	25
Parts Breakdown and List	26-31
Warranty	32

GENERAL SAFETY INSTRUCTIONS

Extreme caution should be used when operating all power tools. Know your power tool, be familiar with its operation, read through the owner's manual and practice safe usage procedures at all times.

- ❖ **ALWAYS** read and understand the user manual before operating the machine.
- ❖ **CONNECT** your machine **ONLY** to the matched and specific power source.
- ❖ **ALWAYS** wear safety glasses respirators, hearing protection and safety shoes, when operating your machine.
- ❖ **DO NOT** wear loose clothing or jewelry when operating your machine.
- ❖ **A SAFE ENVIRONMENT** is important. Keep the area free of dust, dirt and other debris in the immediate vicinity of your machine.
- ❖ **BE ALERT! DO NOT** use prescription or other drugs that may affect your ability or judgment to safely use your machine.
- ❖ **DISCONNECT** the power source when changing blade and / or making adjustments.
- ❖ **NEVER** leave a tool unattended while it is in operation.
- ❖ **NEVER** reach over the table when the tool is in operation.
- ❖ **ALWAYS** keep blades, knives and bits sharpened and properly aligned.
- ❖ **ALL OPERATIONS MUST BE** performed with the guards in place to ensure safety.
- ❖ **ALWAYS** use push sticks and feather boards to safely feed your work through the machine.
- ❖ **ALWAYS** make sure that any tools used for adjustments are removed before operating the machine.

CX101 - 18" Variable Speed Wood & Metal Band Saw

SPECIFIC SAFETY INSTRUCTIONS

- ⚠ **CX101** is perfect for cutting wood and various types of metal.
- ⚠ **ALWAYS INSPECT** the blade for any cracked or missing teeth before operating the band saw.
- ⚠ **ALWAYS ENSURE** that the blade tension is properly set for the type and width of blade installed.
- ⚠ **NEVER** place your fingers or hands in the line of cut. If you slip, your hands or fingers may come into contact with the blade. Always use a push stick when ripping narrow pieces.
- ⚠ **DO NOT** back the work-piece away from the blade while cutting. Always turn off the machine if you are backing out a cut.
- ⚠ **ALL GAURDS** must be in place while operating the band saw to ensure safety.
- ⚠ **ALWAYS FEED** the stock smoothly. Do not force or twist the work-piece while cutting.
- ⚠ **ALWAYS ENSURE** that the band saw blade guard is no more than 1/2" above the stock.
- ⚠ **MAKE SURE** before making any adjustments, the switch is in the "OFF" position and the cord is un-plugged from the power source.
- ⚠ **NEVER LEAVE** the band saw unattended while it is running.
- ⚠ **DO NOT** attempt to remove jammed pieces unless the band saw has come to a complete stop and the power switch has been turned to the **OFF** position.
- ⚠ **NEVER TURN ON** the band saw if the blade is in contact with your stock.
- ⚠ **ALWAYS ENSURE** that the guide blocks are properly set to prevent blade wander.
- ⚠ **ALWAYS MAKE CERTAIN** that the bearings are properly adjusted to guide the blade.
- ⚠ **MAINTAIN AND SERVICE** your band saw regularly as instructed in the user manual.
- ⚠ **MAKE SURE** you have read and understood all the safety instructions in the manual and you are familiar with your band saw, before operating the CX101. If you fail to do so, serious injury could occur.

WARNING

The safety instructions given above can not be complete because the environment in every shop is different. Always consider safety first as it applies to your individual working conditions.



CX101 – 18” Variable Speed Band Saw

FEATURES


MODEL CX101 – 18” VARIABLE SPEED WOOD / METAL BAND SAW

As part of the growing line of Craftex woodworking & metalworking equipment, we are proud to offer the CX101 - 18” Variable Speed Band Saw. The Craftex name guarantees Craft Excellence. By following the instructions and procedures laid out in this user manual, you will receive years of excellent service and satisfaction. The CX101 is a professional tool and like all power tools, proper care and safety procedures should be adhered to.

- ⊞ Motor 1.5 HP, 220V Single Phase
- ⊞ Switch On/Off Paddle
- ⊞ Variable Speed 150 – 3000 FPM
- ⊞ Cast Iron Table Size 18” x 24”
- ⊞ Table Tilt 0° to 10° Left and 0° to 45° Right
- ⊞ Wheel 18”
- ⊞ Max Blade Width 1/8”
- ⊞ Min Blade Width 1-3/4”
- ⊞ Maximum Cutting Height 12”
- ⊞ Floor to Table Height 37-1/4”
- ⊞ Cutting Capacity/Throat 17-1/2”
- ⊞ Dust Collection Ports 2 Ports @ 4”
- ⊞ Blade Length 133”
- ⊞ Bearings Sealed and Permanently Lubricated
- ⊞ Computer Balanced Cast Iron Wheels Yes
- ⊞ Co-Planer Adjustment Yes
- ⊞ Powder Coated Paint Yes
- ⊞ Precision Ripping Fence Yes
- ⊞ Quick Release Tension Adjustment Yes
- ⊞ Overall size 30” x 41” x 74”
- ⊞ Approximate Weight 216 Kg
- ⊞ Warranty 3 Years

CX101-18" Variable Speed Wood & Metal Band Saw

Physical Features

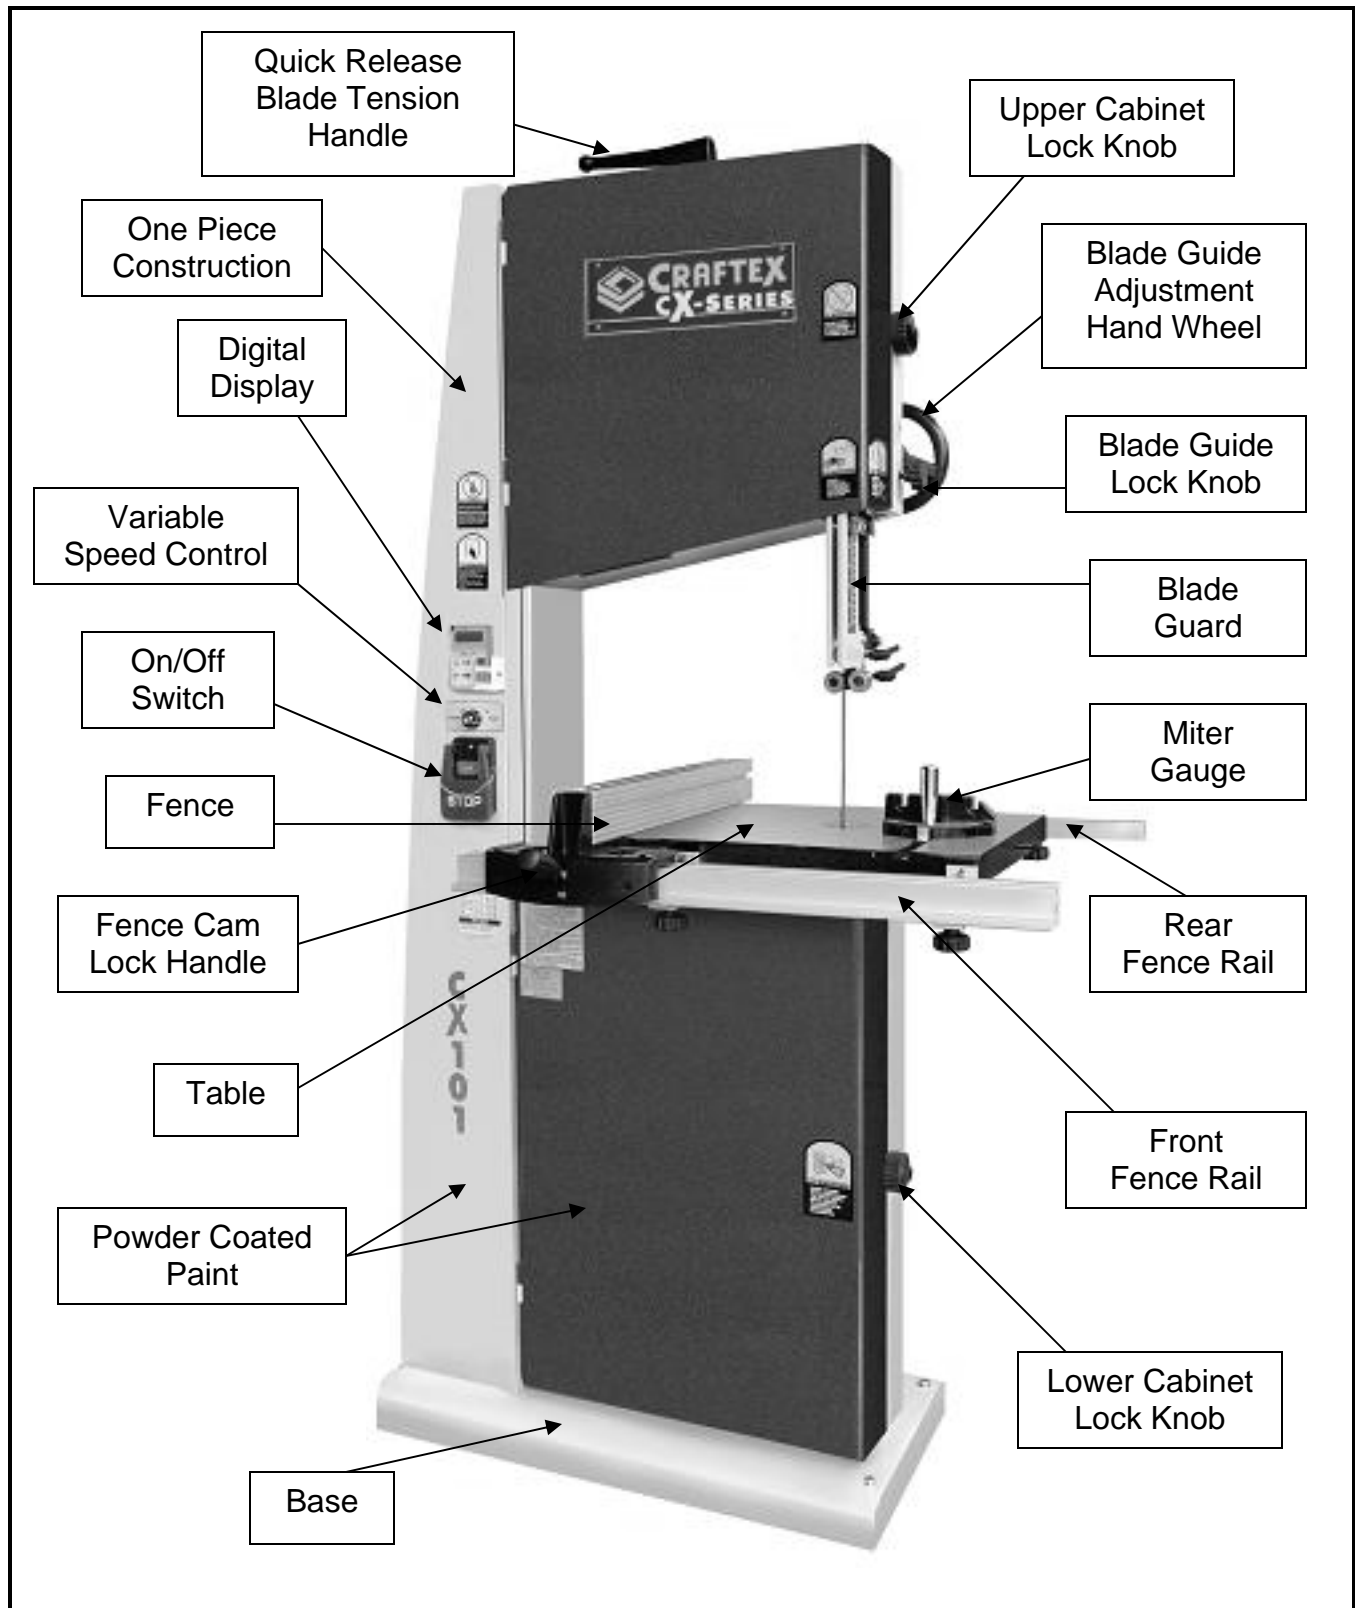

SETUP

Before setting up your machine you need to read and understand this user manual completely.

The unpainted surfaces of this band saw are coated with a rust preventive waxy oil and you will want to remove this before you begin assembly. Use a solvent cleaner that will not damage painted surfaces.

WARNING

CX101 is a heavy machine. Do not over-exert yourself. Use a fork truck or get the help of an assistant or a friend.

UNPACKING

The machine is properly packaged in a carton for safe transportation. When unpacking, carefully inspect the crate and ensure that nothing has been damaged during transit. Open the crate and check that the machine is in good condition.

The hardware (screws, washers & etc) might be shipped in a plastic bag. After the machine has been un-packed, check that all loose parts and hardware are present.

List of Contents

A.	Table	1
B.	Table Insert	1
C.	Table Lock Knobs	2
D.	Extension Table	1
E.	Table Pin	1
F.	Allen Keys	2
G.	Wrench.....	1

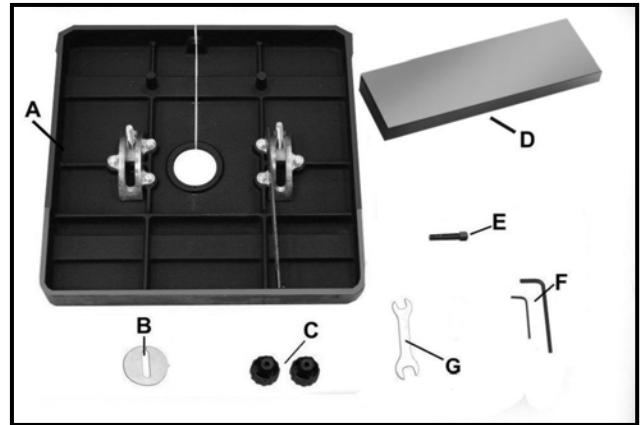


Figure-1 Inventory

List of Contents

H.	Miter Gauge Holder.....	1
I.	Fence Holder	1
J.	Miter Gauge	1
K.	Scale (for the front rail)	1
L.	Fence Assembly	1
M.	Front Rail	1
N.	Rear Rail.....	1
O.	Front Rail Brackets	2
P.	Rear Rail Brackets.....	2
Q.	Front Rail Knobs	2
R.	Rear Rail Knobs.....	2
S.	Hardware.....	1 Bag

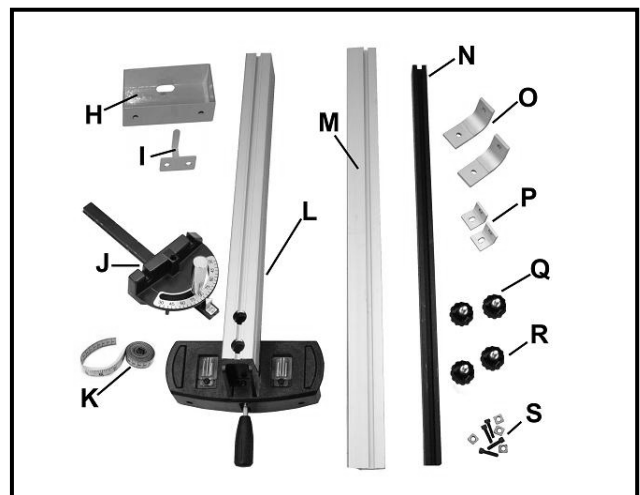


Figure-2 Inventory

PROPER GROUNDING

Grounding provides a path of least resistance for electric current to reduce the risk of electric shock.

CX101 is equipped with a 220 single phase motor which features a 3-conductor cord and a 3-prong grounded plug to fit a grounded type receptacle. Make sure the cord is plugged into a properly installed and grounded power outlet.

To prevent electrical hazards, have a qualified electrician ensure that the line is properly wired.

This appliance is for use on a normal 220-volt circuit and is factory-equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the appliance is connected to an outlet having the same configuration as the plug. If an adaptor plug is used, it must be attached to the metal screw of the receptacle.

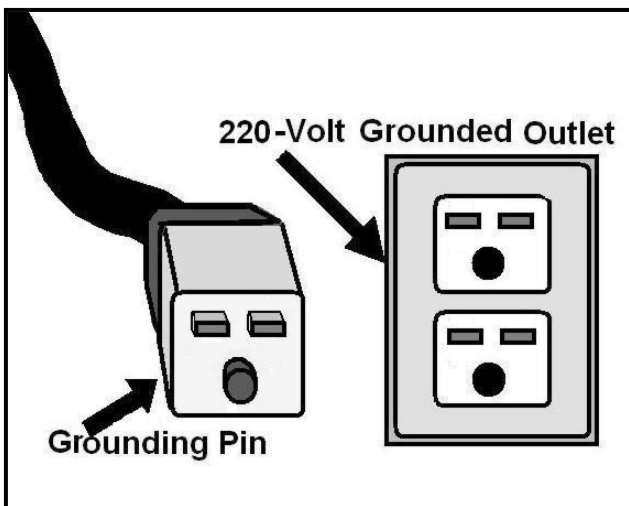


Figure-3 220-Volts Outlet for CX101

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

It is strongly recommended not to use extension cords with your CX101. Always try to position your machine close to the power source so that you do not need to use extension cords.

In case if you really find it necessary to use an extension cord, make sure the extension cord does not exceed 50-feet in length and the cord is 14-gauge to prevent motor damage.

Your CX101 is equipped with a cord having 3-prongs which fits a 3 prong grounded receptacle as shown in figure-3. Do not remove the grounding prong to fit it into a 2-pronged outlet. Always check with a qualified electrician if you are in doubt.

ASSEMBLY

Follow the steps below to assemble your band saw:

Take the band saw table and put it upside down on floor and make sure that all the table bolts shown in the figure are tight. See figure-4

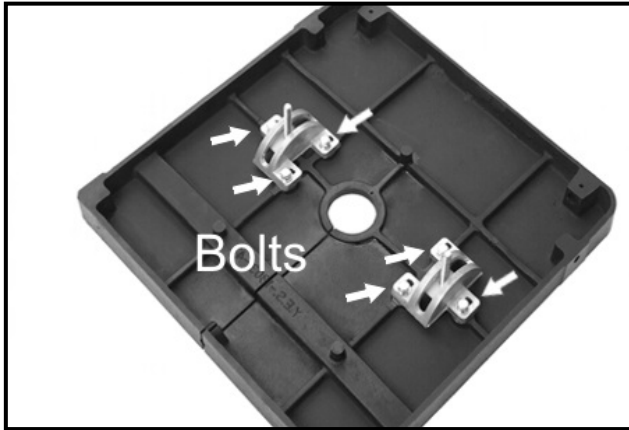


Figure-4 Table trunion bolts

Now attach the table extension to the table using washers, nuts and bolts, making sure that the tables are firmly attached to each other.

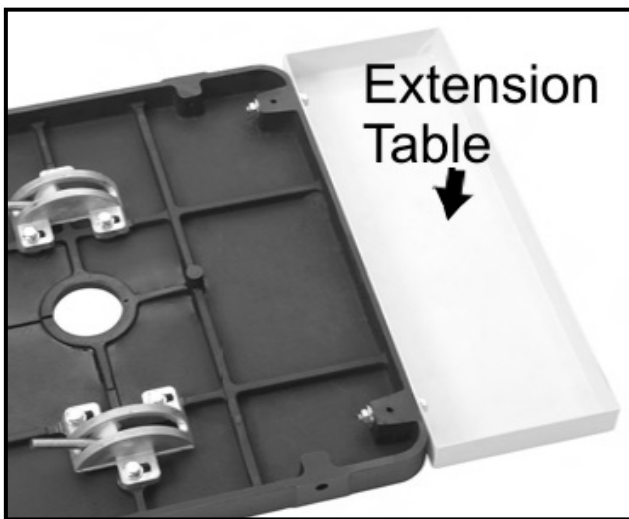


Figure- 5 Installing the extension table

Now turn the table up right, and remove the table pin from the table slot and the table insert (if already installed) and move the table in position around the blade, guiding through the table slot. See figure-6

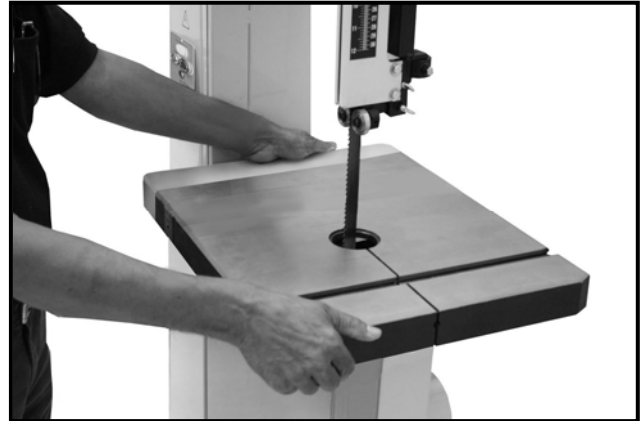


Figure-6 Installing the table

Position the table on the base in such a way that the bolts under the table extend through the holes on the base. Thread the two knobs on the bolts (do not tighten). See figure-7.

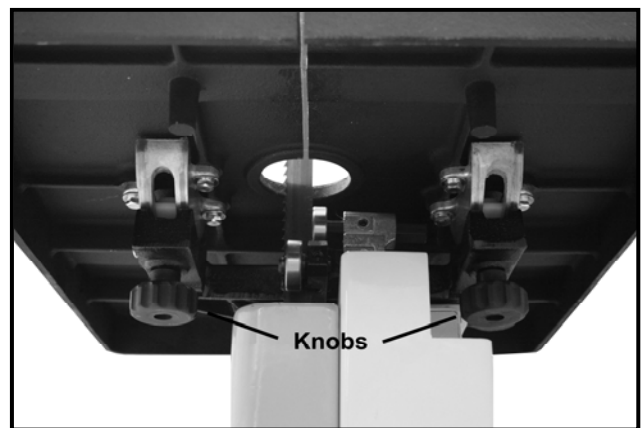


Figure-7 Knobs threaded on the bolts

Position the table on the table stop and the base so that the table is perpendicular to the blade. See page 15 for details.

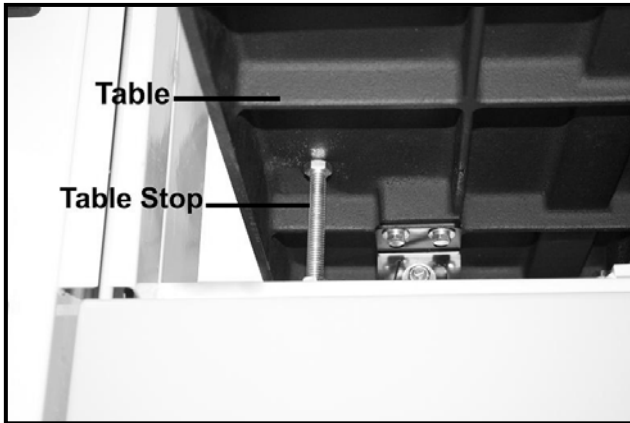


Figure-8 Table sitting on the table stop

Install the table insert at the center of the table and the table pin into the table slot as shown in figure-9.

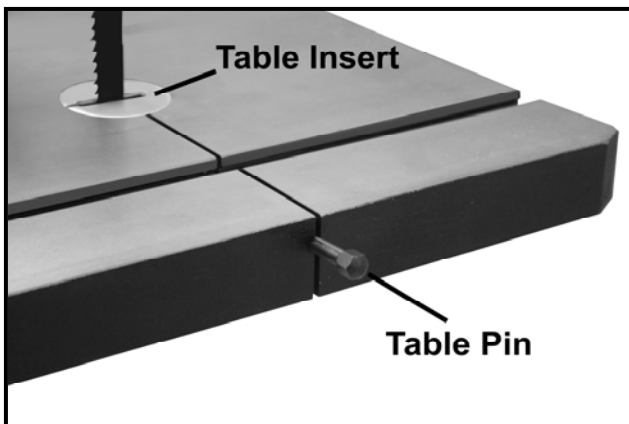


Figure-9 Installing table insert and table pin

Take the rail bracket (smaller) and attach it to the table using cap screws provided. See figure-10

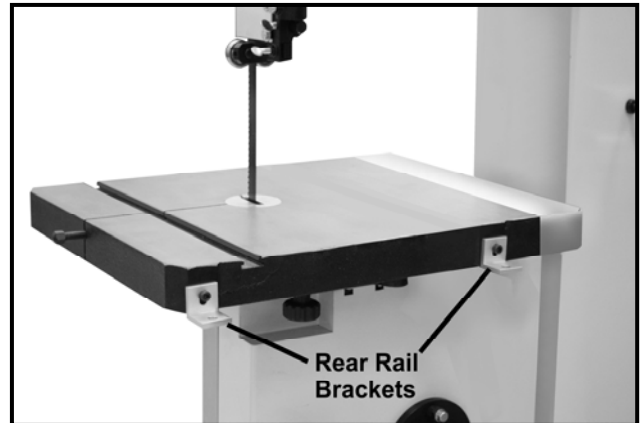


Figure-10 Rear rail brackets attached

Now, attach the rear rail to the brackets using the knobs provided. See figure-11.

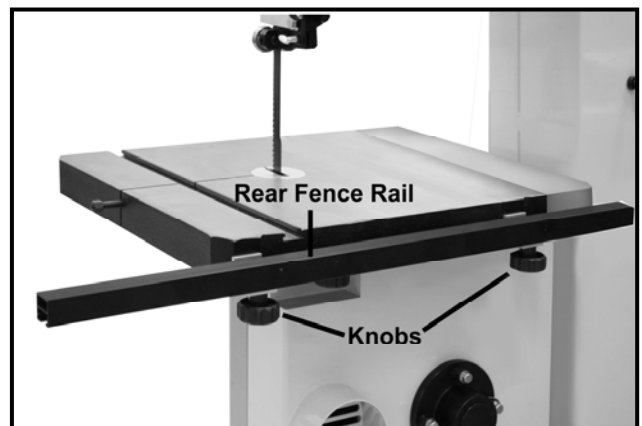


Figure-11 Installing the rear fence rail

Take the rail brackets (larger) for the front fence rail and attach it to the table using the cap screws provided.

Place the front fence rail on the brackets and insert the knobs through the hole on each bracket and thread the T-nuts onto the ends of the knobs a couple of turns to tighten the fence rail in place. See figure-12

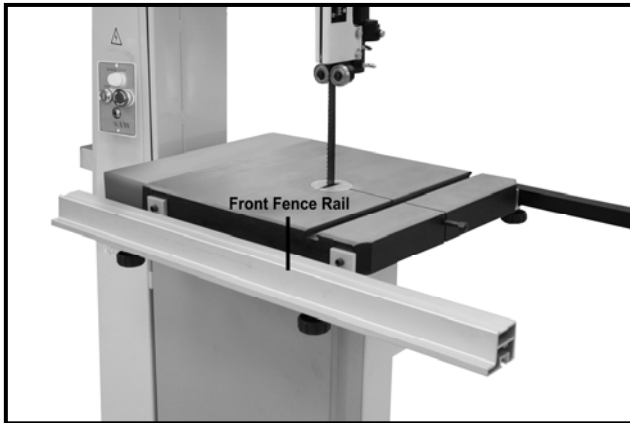


Figure-12 Front fence rail installed

Now take the fence and pull its handle up. Place the fence on the front fence rail and slide it against the blade.

Use a pencil to mark the fence rail where the fence scale indicator on the right hand side is pointing (there is a gap just behind the indicator plate where you can mark the rail). This mark will indicate where to align the 0" mark when install the scale.

Now, remove the fence from the rail and install the adhesive backed scale on the front fence rail.



Figure-13 Adhesive backed scale attached to the front rail

Once you have attached the adhesive backed scale to the rail, place the fence on the rail and tighten it in place by pushing down the handle. See figure-14

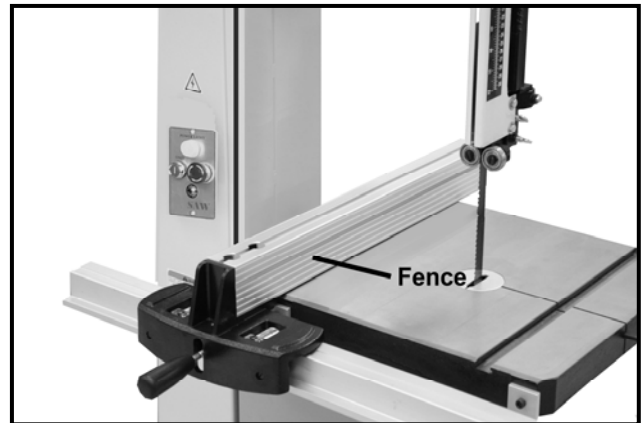


Figure-14 Fence installed on the rails

Attach the miter gauge holder and the fence holder to the back of the saw using screws and washers provided see figure-15

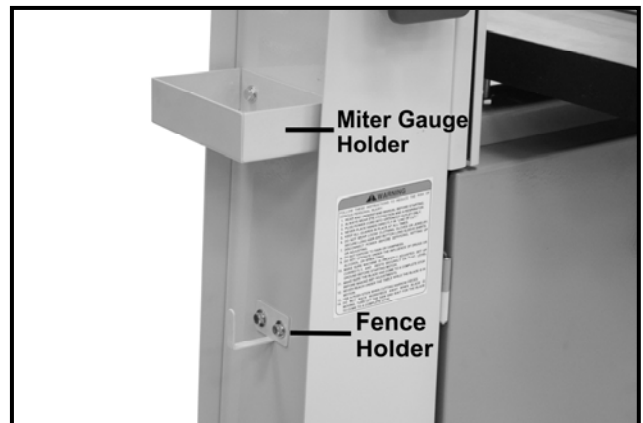


Figure-15 Miter gauge holder and fence holder installed

Blade Tracking

The blade tracking means where the blade rides on the upper and lower wheels. The blade should always be centered on both wheels.

Although the blade tracking of this band saw is factory set, you should check it again to make sure that the blade is centered on the wheels. The misalignment of the blade can be controlled by adjusting the upper wheel tilt lock nuts.

Disconnect the machine from power and open the upper wheel cover. Rotate the upper wheel by hand slowly and see how the blade rides on the wheel.

If the blade is not properly aligned and needs to be adjusted, loosen the lock nuts shown in figure-16 and turn the knobs.

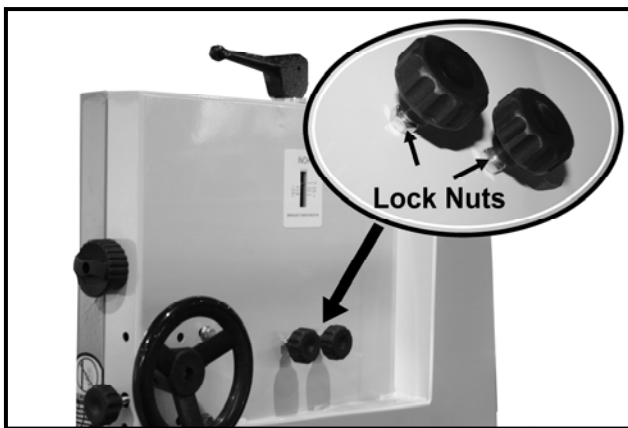


Figure-16 Knobs and Locks Nuts

Turn the knobs clockwise:

If the blade moves towards the front edge of the wheel. It makes the top of the wheel to tilt back and moves the blade towards the center.

Turn the knobs counter-clockwise:

If the blade moves towards the back edge of the wheel. It makes the top of the wheel

to tilt to the front and moves the blade towards the center.

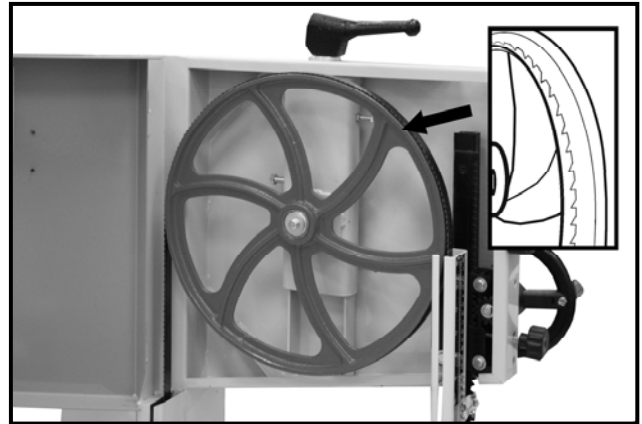


Figure-17 Blade centered on the wheel

When you have adjusted the blade tracking, retighten the lock nuts.

IMPORTANT

In very rare cases if the blade tracking is not adjusted by tilting the upper wheel, then you will have to make minor adjustments to the angle of tilt of the lower wheel. Loosen the four hex bolts and rotate the sleeves to tilt the lower wheel to get the proper angle of tilt and tighten the bolts back. Remember, this adjustment is done only if the blade tracking is not adjusted by tilting the upper wheel.

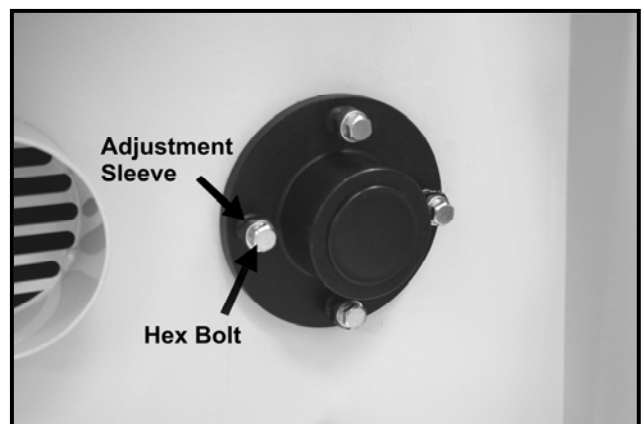


Figure-18 Lower wheel adjustment sleeves

Basic Controls

The basic controls of this machine are shown in the figure below. Use the figure and read the text to understand what the basic controls of this band saw are.

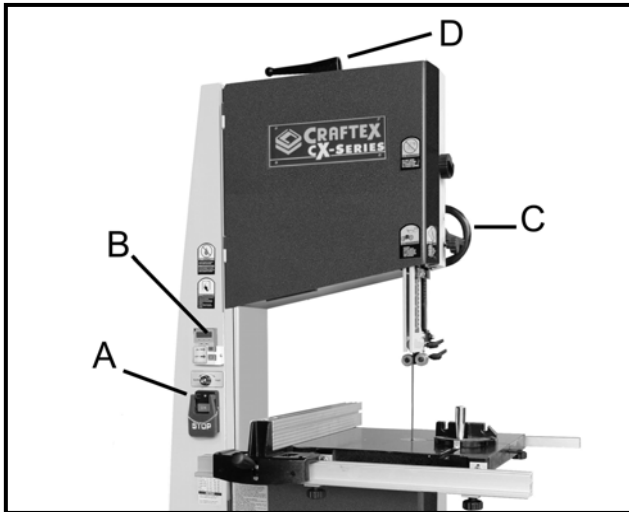


Figure-19 Basic controls of CX101

- A. The power switch turns the power on/off to the motor switch.
- B. The motor switch start and stops the motor and only works after the power switch has been reset and turned on.
- C. The blade guide hand wheel raises or lowers the blade guide assembly on the table when rotated.
- D. The quick release blade tension lever increase or decreases blade tension when rotated.

IMPORTANT

Make sure you have done the tracking adjustment and the blade is centered on the wheels before you start the band saw for a test run. See page-12 for details on blade tracking.



WARNING

This machine can perform many types of operations which are beyond the scope of this manual and are very dangerous if performed incorrectly. The safety instructions given in this manual can not be complete because the environment in every shop is different. Always consider safety first as it applies to your individual working conditions.

TEST RUN

Once you have assembled your machine completely, it is then time for a test run to make sure that the machine works properly and is ready for operation.

During the test run if there is any unusual noise coming from the machine or the machine vibrates strangely, stop the machine immediately and disconnect from the power source and investigate if you can find out the problem with your machine.



READ THE MANUAL

Before starting the band saw, make sure that you have read and understood the manual and you are familiar with the functions and safety features on this machine. Failure to do so may cause serious personal injury.

Blade Tension

A properly tensioned blade is very important to get the best performance from any band saw. If the blade is too loose there is a possibility that the blade will slip or drift off the line while in operation and it will be hard to have accuracy in the line of cut. If the blade is tensioned too tightly, it will be very difficult to make tighter radius cuts and there will be a great possibility of blade breakage.

When using a wider blade for making straight cuts, for re-sawing or making wide radius cuts, tighter blade tension is recommended; while using narrower blades for cutting shorter stock or making tighter radius cuts, less blade tension is recommended.

The information above is just a guideline for you to understand to set the blade tension according to the cut. However, understanding the blade tension adjustment comes with practice.

Look at the blade tension scale located at the back of your band saw. The scale shows the ideal blade tension adjustment according to the width of the blade.

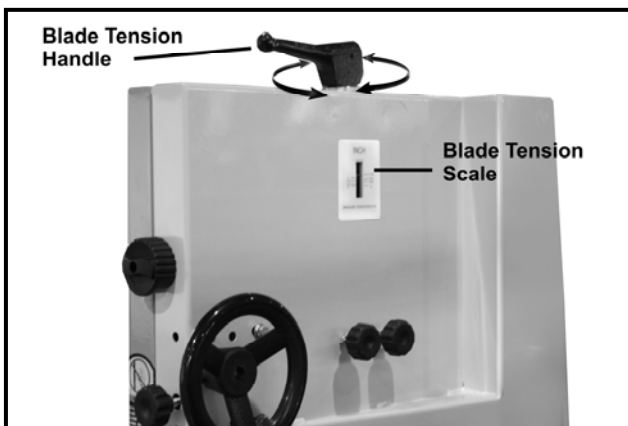


Figure-20 Quick release blade tension handle and scale

Adjusting the Blade Tension

To adjust the blade tension, lift the blade tension handle shown in figure-20 and turn it. Turning the handle clockwise will tighten the tension on the blade while turning the handle counter-clockwise will loosen the blade tension.

IMPORTANT

All blades stretch with use, and the scale at the back of your band saw (shown in figure-20) is just an approximation. So, do not rely on any adjusted measurement for a long period of time as the blades stretch and the tension on the blade changes.

IMPORTANT

To prolong the life of the blade and reduce blade stretching, when the machine is not in use for period of 24 hours or more release the tension on the blade.

Guide Bearings Adjustment

The guide bearings (beside) and thrust bearing (behind) the blade, support the blade to move in a straight line during cutting operation. Properly adjusted support bearings play, an important role in getting accurate cuts.

To adjust the guide bearings, turn the machine off and disconnect the cord from the power source.

Remove the blade guard and use a screw driver to loosen the screws located on each of the two guide bearings as shown in figure-21.

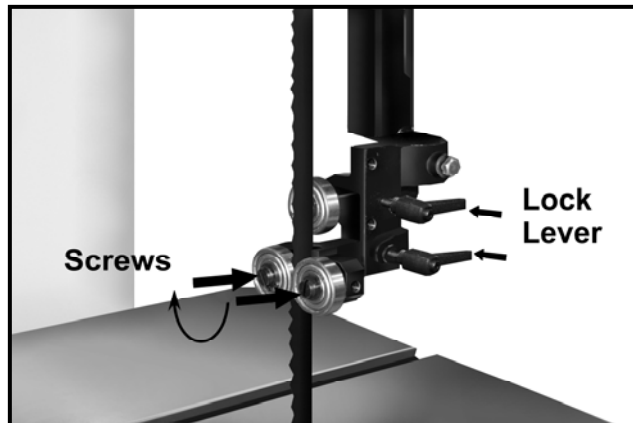


Figure-21 Set Screws

Adjust the bearings so that the space between the bearing and the blade should be 0.02" which is thickness of a sheet of paper. See figure-22

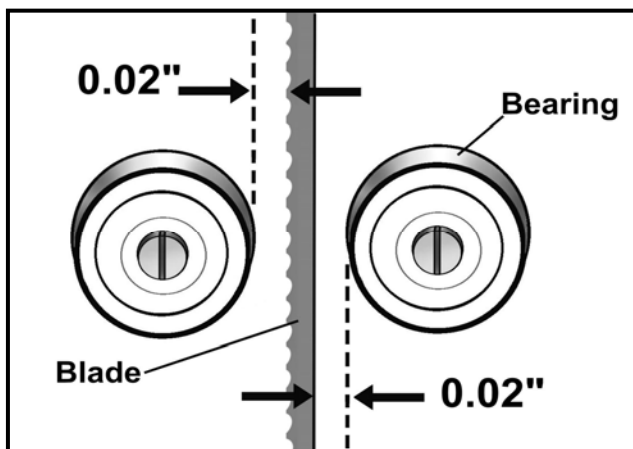


Figure-22 Distance between the guide bearings and the blade

Now, retighten the set screws to lock the guide bearings in place.

Loosen the lock levers shown in figure-23 and move the bearing shafts in or out so that the guide bearings are 1/32" behind the blade teeth and the thrust bearing, 1/64". Once the bearings are at the correct position behind the blade, tighten the lock lever to lock the bearings in place. See figure-23.

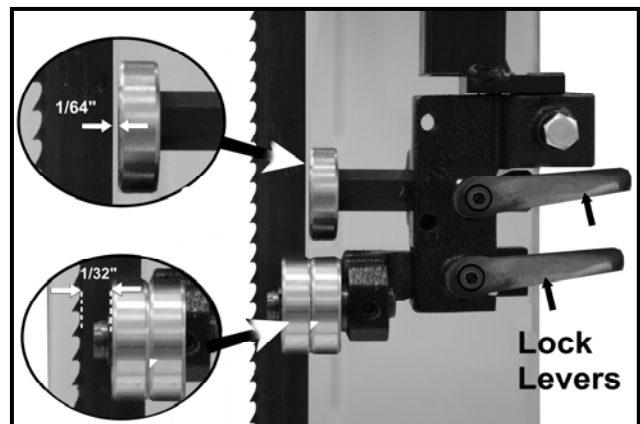


Figure-23 Distance of the bearings behind the blade

Adjust the lower bearings in the same manner.

Table Stop Adjustment

CX101 features a table stop which allows the table to easily come to a 90° if the table is tilted.

To adjust the table stop so that the table sits at 90°, you should first make sure the switch is in "OFF" position and the power cord is unplugged. Loosen the two lock knobs under the table and loosen the hex nut which locks the table stop bolt.

Now, place a square on the table as shown in figure-24 and adjust the table stop so that the table is at a 90° with the blade.

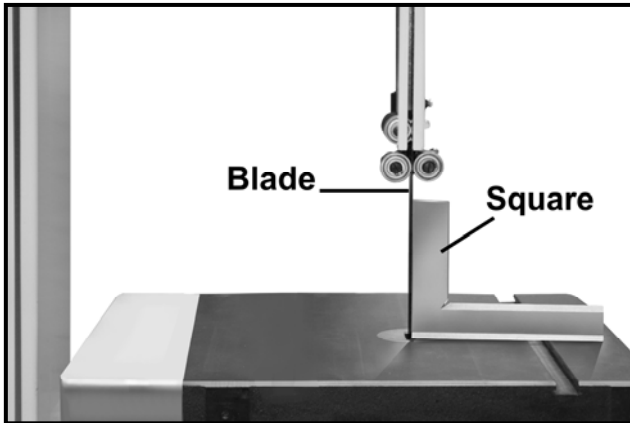


Figure-24 Adjusting the table at 90° to the blade using square

Once the table is at 90° with the blade, tighten the hex nut and the knobs.

Table Tilt Scale Calibration

To calibrate the table tilt scale:

Make sure the table is at 90° to the blade and the blade tensioning and tracking is properly set. (See Page 12 & page 14 for details)

Disconnect the machine from the power source and loosen the pointer screw shown in figure-25. Align the tip of the pointer with the 0" mark on the tilt scale and tighten the pointer screw.

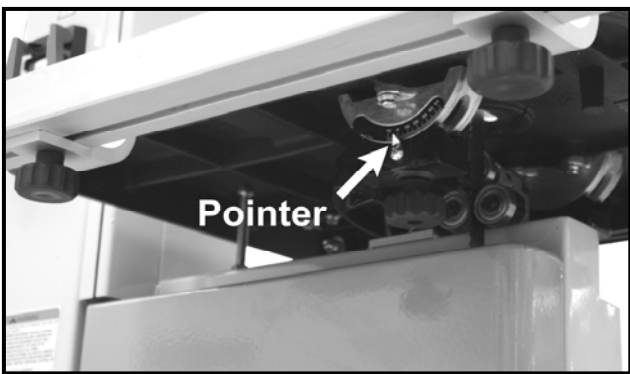


Figure-25 Table tilt scale

Table Alignment

To make accurate cuts with your band saw, the table should be aligned properly with the blade.

To align the table:

Make sure the blade tension and tracking is done correctly. Disconnect the machine from the power source and loosen the table trunnion bolts under the table shown in figure-26.

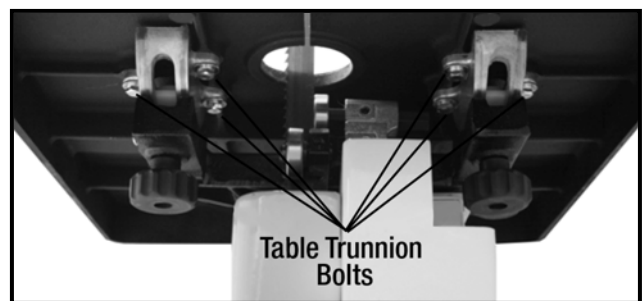


Figure-26 Table trunnion bolts

Place a straightedge on the table so that the straightedge touches the blade and is parallel to it as shown in figure-26. Make sure the straight-edge touches only the flat part of the blade, not the teeth.

Now, use a ruler to measure the distance between the miter slot and the straight edge on both sides on the table R & L. See figure-27.

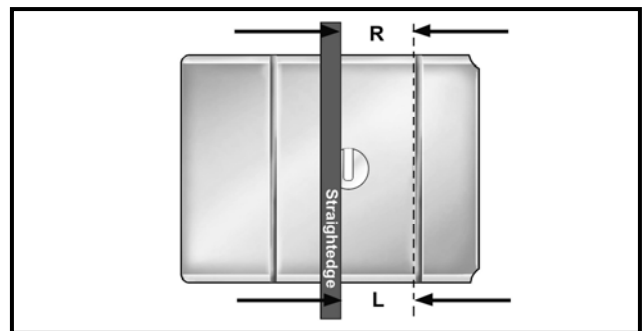


Figure-27 Aligning the table with the blade using a straight-edge

Adjust the table until the distance on both sides of the table is equal and tighten the table trunnion bolts.

Guide Post

The guide post assembly can be moved up or down above the work-piece. The movement of the guide post is controlled with the hand wheel shown in figure-28.

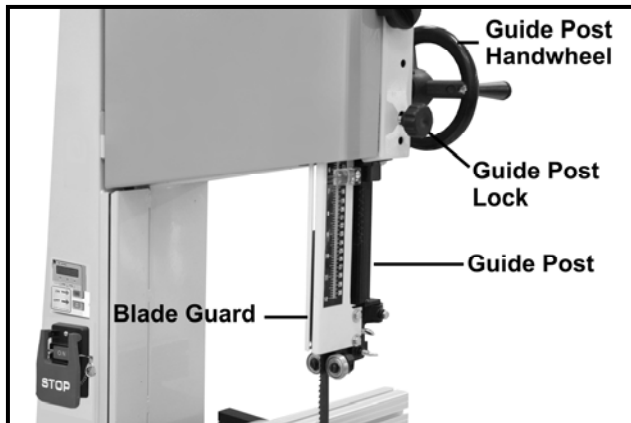


Figure-28 Guide post

To make accurate cuts and to reduce the blade slipping out of position, it is recommended to keep the guide post no more than 1" above the work-piece while cutting operation.

To Adjust the Guide Post Assembly:

Make sure the switch is turned off and the cord is disconnected from the power source.

Loosen the guide post lock knob on your band saw shown in figure-28 and rotate the hand-wheel to move the guide post assembly up or down.

When the guide post assembly is about 1" above the work-piece, lock the guide post in place using the lock knob.

Work-piece Inspection (Wood)

Before cutting any wood, make sure to inspect the work-piece for nails, staples, small pieces of stone or metal and any other object which is dangerous to come in contact with the blade.

If the wood contains any of these objects and it comes in contact with the blade, the object might fly and hit the operator or seriously damage the blade. For a safe cutting method always inspect your work-piece carefully before cut and wear eye protection.

Some woods with excessive twisting or wrapping are unstable while cutting and are dangerous to cut because during operation the work-piece can move unexpectedly which either damage the blade or hurt the operator.

If the wood is slightly cupped, make sure the cupped face of the wood is held against the fence. If the bowed side of the work-piece is held against the fence, the work-piece will move while cutting.



WARNING

The information above is just a guideline for you to understand how to cut a work-piece with slight cupping. If you are not sure and do not have any experience in cutting cupped stock, do not cut it. Failure to follow these instructions might bring personal injuries to the operator or serious damage to the blade.

Some stock with large knots can damage the blade and wet stock will give a poor result.

RECOMMENDED CUTTING SPEED

Material	Speed FPM (M/Min)	Material	Speed FPM (M/Min)	Material	Speed FPM (M/Min)	Material	Speed FPM (M/Min)
Carbon Steel	196-354 (60) (108)	Tool Steel	203 (62)	Alloy Steel	111-321 (34) (98)	Stainless Steel	150-203 (46) (62)
Angle Steel	180-220 (54) (67)	High Speed Tool Steel	75-118 (25) (36)	Mold Steel	246 (75)	Gray Cast Iron	108-225 (33) (75)
Aluminum Alloy	220-534 (67) (163)	Hot Work Tool Steel	203 (62)	Stainless Steel	85 (26)	Malleable Cast Iron	321 (98)

Work-Piece Inspection (Metal)

Before cutting a metal work-piece, inspect it carefully for any defects in the material.

For thin or small metals, the work-piece should be clamped between larger pieces to hold the work-piece tight, when fed against the blade.

Some small work-pieces will be damaged if cut on the band saw; instead use; a shear or nibblers for this work.

Some round work-pieces like cables, chains etc, which are not stable, if not supported with a vise, should not be cut using a vertical band saw.

Some hard metals take a longer time when cutting. These kinds of metals need a different type of blade and lubrication while cutting.

Tanks, cylinders, valves that contain gasses or liquids can cause fire, explosion or serious personal injury and damage to the machine.

IMPORTANT

Avoid cutting tanks, cylinders and valves that contain gasses or liquids if possible. If you find it really necessary to cut these items, always vent and purge them, before cutting.

Sometimes it is not safe to cut magnesium. Cutting magnesium with a dull blade can create enough friction to make the small magnesium chips produce fire. Avoid cutting magnesium If possible.

Cast Iron Wheels

The CX101 comes with heavy duty cast iron wheels for added stability and overall performance.

A coplanar shim adjustment also added for better alignment of the wheels that allow the blade to run as straight as possible ensuring straight and accurate cuts.

This feature will help improve the band saw performance with the wheels working together instead of against each other. The end result will give you less vibration, more power, accuracy and less wandering. This will be noticed most when it comes to resawing and making straight cuts with blades larger than 1/4".

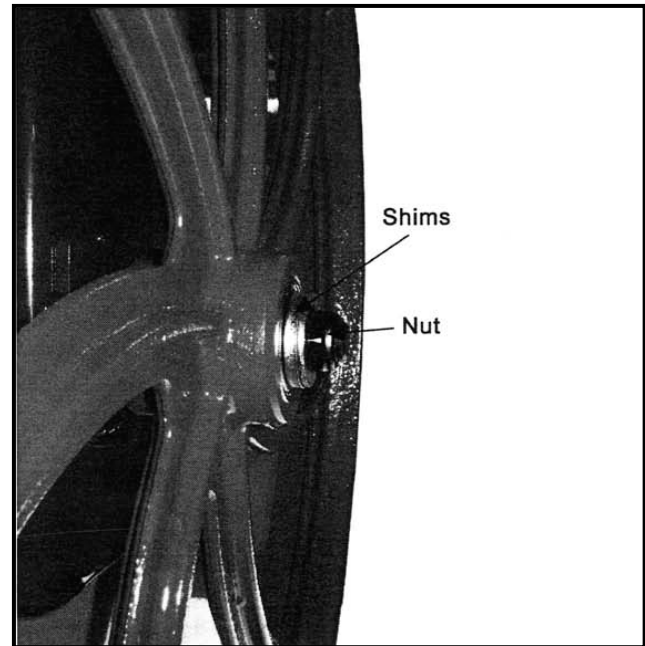


Figure-29 Top wheel front shims

Coplanar Adjustment

Figure-29 and Figure-30 show the shim for adjusting the top wheel. To move the wheel out remove the nut and shims then remove the wheel.

Now you can add shims to the back of the wheels as required. Replace the wheel and any remaining shims and the nut and tighten. To move the wheel in, remove the cast iron wheel as mentioned above and remove the shims from behind the wheel. Replace the wheel, shims and nut and retighten.

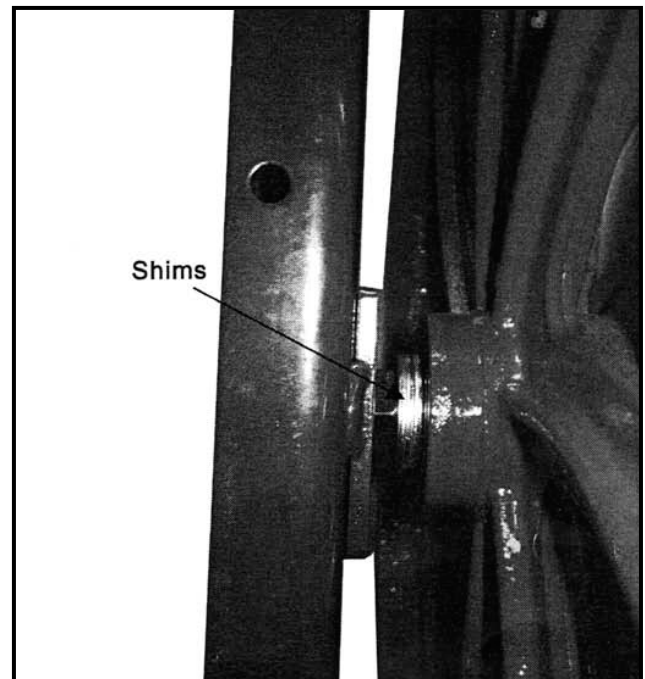


Figure-30 Top wheel back shims

OPERATIONS

Before operating the band saw make sure you have performed the following adjustments:

- ⊞ Blade tension adjustment
- ⊞ Blade tracking adjustment
- ⊞ Guide bearings adjustment
- ⊞ Make sure all the guards are in place



WARNING

CX101 produces fine dust particles during cutting operation which is very dangerous for health. Always connect your band saw to a dust collector.

Ripping

Cutting solid wood with the grain cutting down the length of the work-piece is called ripping.

Adjust the fence on the rails, according to the width of the cut on the work-piece and turn the hand-wheel to set the guide post assembly 1" above the work-piece.

Now, turn the band saw ON and use a push stick or the band saw finger protector model CT165 (See page-24) to push the work-piece against the blade. See figure-31.



WARNING

Do not use your fingers to feed narrow work-pieces into the blade. If you slip, your fingers might come close the blade. Always use a push stick.

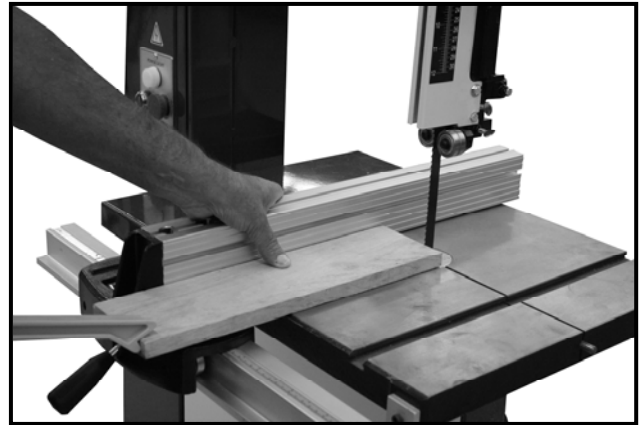


Figure-31 Ripping on CX101

Crosscutting

Cutting solid wood across the grain and in plywood or metal cutting across the width of the work-piece is called crosscutting.

Mark the work-piece where you want to start the cut from and make sure the miter gauge is at 90° position on the miter slot. Place the work-piece on the table so that the marked point is aligned with the blade and hold the work-piece against the miter gauge.

Turn the band saw ON and feed the work-piece against the blade. See figure-32

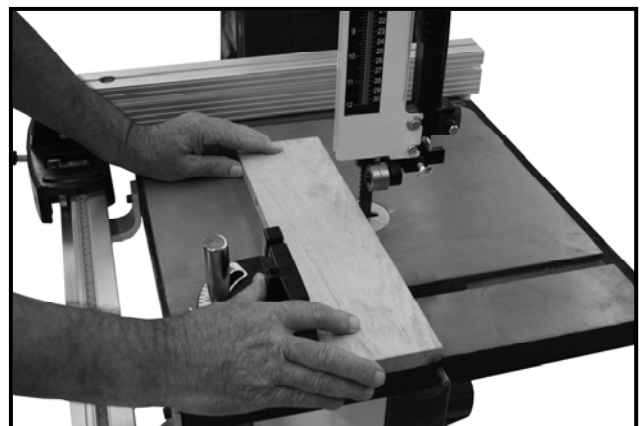


Figure-32 Crosscutting on CX101

Resawing

Cutting a work-piece into two or more thinner pieces is called resawing. Wider blades give better result, when resawing.

To resaw a work-piece make sure that the table is at a 90° with the blade and use a wider blade for better results.

Adjust the fence according to the width of the cut you want, and lock it in position. Turn the band saw ON and feed the work-piece into the blade using feed paddles until the blade is completely through the work-piece.

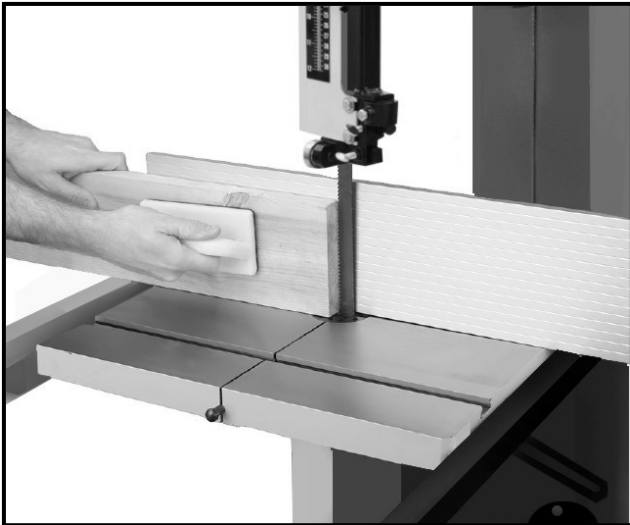


Figure-33 Resawing on CX101

Cutting Curves

For cutting curves always try to use narrower blades. When cutting curves feed the stock into the blade and turn it very carefully so that the blade follows the line of cut and make sure the blade does not twist.

Make relief cuts through the waste part of the work-piece which makes the job easier and prevents the blade from twisting.

CONNECTING TO A DUST COLLECTOR

CX101 features two 4" diameter dust ports to connect to a dust collector.

When connecting to a dust collector, use a proper sized hose and make sure all the connections are sealed tightly.

You should use a dust collector with at least a 500 CFM rating.

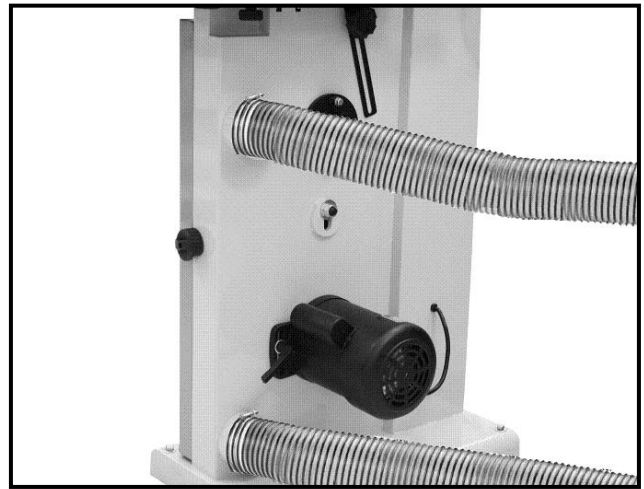


Figure-34 CX101 connected to dust collector



WARNING

The saw dust produced by the band saw can go into your lungs and cause serious health problems. Make sure the band saw is connected to a dust collection system while operating it.

MAINTENANCE

During the life of your machine, you will need to practice some regular maintenance to keep your saw in peak performance condition.

Removing the Blade

To remove / change the blade, turn the switch OFF and disconnect the cord from the power source.

Release the blade tension lever, and remove the table insert and the table pin.

Open the upper and lower wheel cabinets and carefully slide the blade off the both wheels.

Now, slide the blade out, through the slot on the table.

To install the new blade

Once the old blade is removed, carefully slide in the new blade through the slot on the table so that the teeth of the blade are pointing downwards.

Position the blade through the upper and lower guide bearings and install it over the wheels.

Adjust the blade tracking (See page-12) and adjust the guide bearings (See page-14).

Once the blade is in the proper position, turn the tension lever to tension the blade.

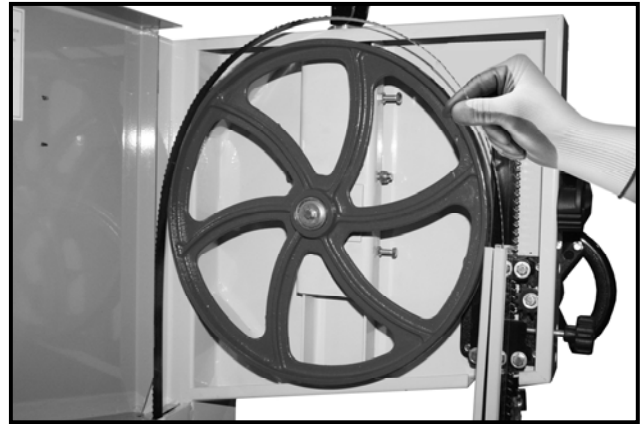


Figure-35 Installing the new blade

Close the top and bottom cabinets and insert the table pin and table insert back.



WARNING

When installing / removing and servicing any part of the machine, make sure the power switch is in the off position and the cord is disconnected from the power source. Failure to do so may result in serious personal injury or death.

Blade & Table Alignments

The blade and table alignments should often be checked, and make sure the blade is at a 90° with the table.

See page-16 “Table Alignment” for details.

Tilting the Table Backward

To tilt the table backward, you will need to loosen the bolts shown in figure-36 and adjust them as needed using a wrench.

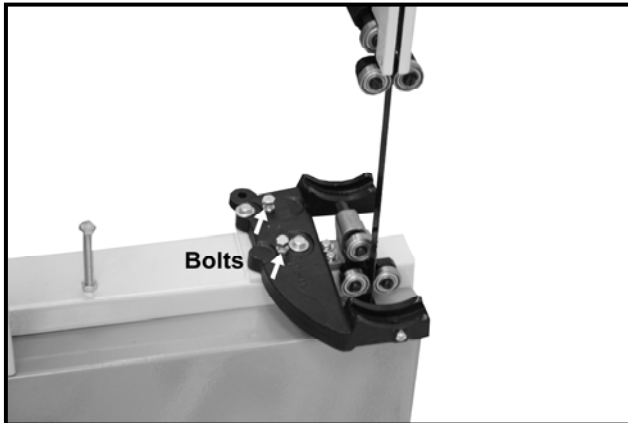


Figure-36 Bolts to tilt the table backward

Table & Base

The moisture from the wood dust remains on the table surface and can cause rust. Protect the un-painted cast iron surfaces of the table by cleaning the table after every use or apply a protective coating.

If the table becomes harder to tilt, remove the table and apply a few drops of oil on the trunnions.

V-Belts

The V-belts stretch with use, and should be re-tensioned periodically. To ensure optimum power transfer from the motor to the blade, the belt must be in good condition and under proper tension.

Check the V-belts at least after every 3 months and more often if the band saw is used daily.

To Inspect the V-Belts

1. Turn the power switch off and disconnect the cord from the power source.
2. Lift the blade tension handle up and release the tension.
3. Open the lower and upper cabinet and remove the blade. (See page-21 Removing/Changing the Blade)
4. Remove the lower wheel by removing the hex bolt securing the wheel to the saw body. See figure-37.
5. Once the wheel is removed, you will have access to the V-belts. Check if the V-belts are in good condition and properly tensioned.

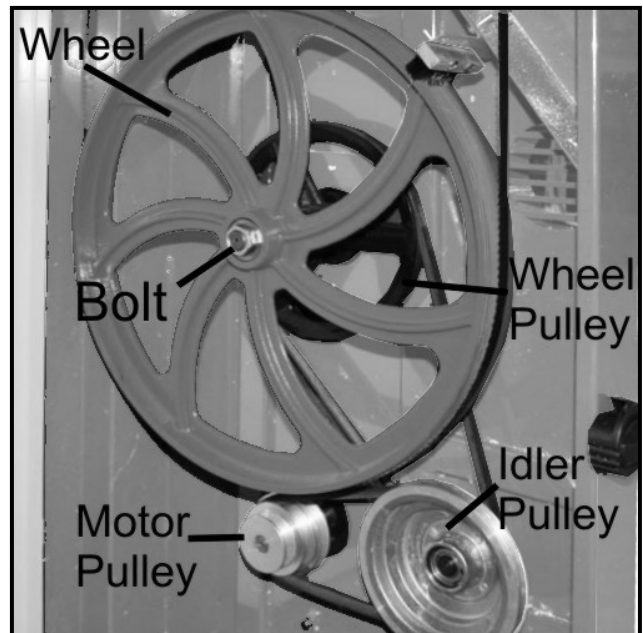


Figure-37 Lower wheel and pulleys

To Replace the V-Belts

6. Follow the instructions 1-5 to access the V-belts.
7. Loosen the motor lock lever shown in figure-38 and idler pulley mounting nut shown in figure-39.



Figure-38 Motor lock lever

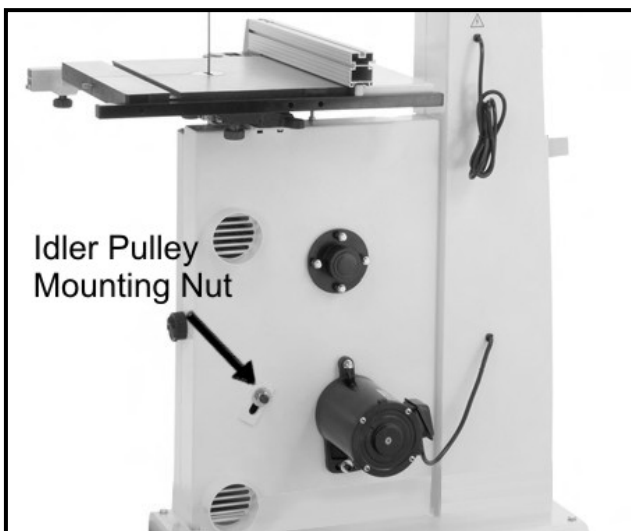


Figure-39 Idler pulley mounting nut

8. Pivot the motor and slide the idler pulley to loosen the belt.
9. Remove the old belt and install the new one.
10. Slide the idler pulley down to tighten the lower wheel V-belt. Keep pressure on the idler pulley and tighten the mounting nut.
11. Check the wheel pulley V-belt if tensioned properly. If tension is necessary, pivot the motor to tighten the motor V-belt. Keep pressure on the motor and tighten the motor adjustment bolt.
12. Check the motor V-belt, if properly tensioned and tighten the motor hinge bolt.
13. Install back the wheel, blade and close the cabinets.



WARNING

When installing / removing and servicing any part of the machine, make sure the power switch is in the off position and the cord is disconnected from the power source. Failure to do so may result in serious personal injury or death.

OPTIONAL ACCESSORIES

These are just a few of the optional accessories available for your CX-Series band saw. Check www.busybeetools.com for more information and current pricing.

Band Saw Finger Protector



Patented new safety device protects your fingers.

Watch the video at www.busybeetools.com

Model CT165

Saw Blade Lubricant Stick



Smoother, quicker cuts when using this wax stick lubricant.

Model AC70010

Safety Kit



Includes:
2-pcs V-sticks
1-pc Feather Board
1-pc Push Pad
1-pc Push Stick

Model B2694

Mobile Base



500 lbs Max
Heavy Duty
Mobile Base

Model HTC200

Ear Protection



Model B2517

Model B2756


Re-Saw & Veneering Jig



Attaches to the T-slot position of your fence so the Required thickness is measured just forward of the blade teeth.

Model B2551

CX101 BODY PARTS BREAKDOWN

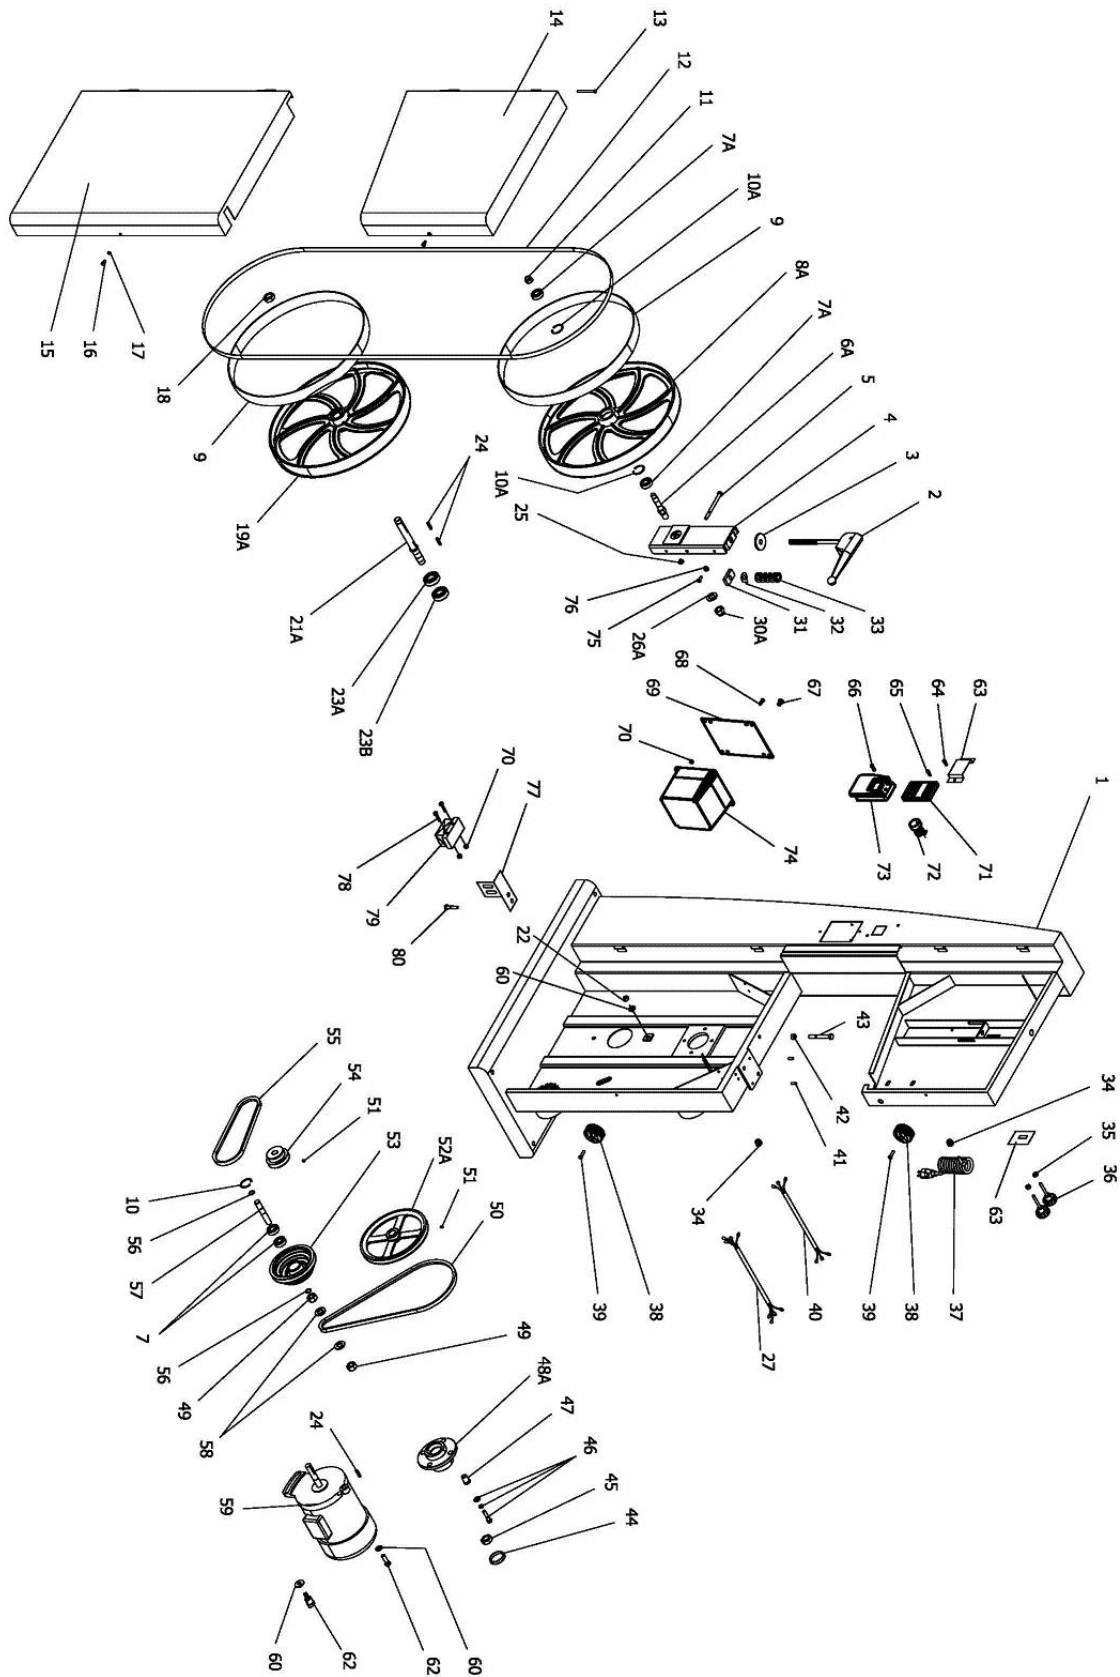


CX101 BODY PARTS LIST

REF#	DESCRIPTION
1	BODY
2	QUICK HANDLE BAR
3	T TYPE WASHER
4	UPPER WHEEL BRACKET
5	SCREW
6A	UPPER WHEEL SHAFT 17MM
7	BEARING
7A	BEARING
8A	UPPER WHEEL - Cast Iron
9	WHEEL PROTECTOR(TIRE)
10	C-RING
10A	C-RING
11	RETAINER NUT
12	BLADE 133"
13	HINGE PIN
14	UPPER GUARD
15	LOWER GUARD
16	CAP SCREW 1/4"*3/8"
17	LOCK WASHER 1/4"
18	HEX NUT 3/4"(L.H.)
19A	LOWER WHEEL -CAST IRON
21A	LOWER WHEEL SHAFT
22	LOCKNUT 3/8"
23A	BEARING
23B	BEARING
24	KEY 5MM
25	NUT
26A	SPRING WASHER
27	CORD
30A	NUT 5/8
31	NUT
32	POINTER
33	SPRING
34	STRAIN RELIEF
35	HEX NUT 5/16"
36	KNOB 5/16*2"
37	POWER CORD
38	GUARD LOCKING KNOB
39	SCREW
40	CORD
41	PIN

REF#	DESCRIPTION
42	HEX NUT 3/8"
43	SCREW
44	BEARING COVER
45	NUT
46	SCREW
47	ADJUSTING SCREW
48A	BEARING BASE
49	NUT
50	V-BELT A41
51	SET SCREW 1/4"*1/4"
52A	WHEEL PULLEY
53	IDLER PULLEY
54	MOTOR PULLEY
55	V-BELT A30
56	C-RING
57	SHAFT
58	WASHER
59	MOTOR
60	FLAT WASHER 3/8"
62	HEX BOLT 3/8"*1 1/4"
63	SWITCH COVER
63	TENSION LABLE
64	SCREWM4*6
65	PHILLIPS HEAD SCREW M3*18
66	SCREW
67	SCREW
68	PHILLIPS HEAD SCREW 3/16"*1/2"
69	CONTROLLER COVER PLATE
70	HEX NUT 3/16"
71	MOTOR INVERTER SWITCH
72	SPEED DIAL
73	SWITCH W/LARGE STOP
74	INVERTER RHYMEBUS RMG-5 1HP
75	HEX BOLT 5/16"*3/4"
76	HEX NUT 5/16"
77	BRUSH BASE
78	SCREW
79	BRUSH
80	HEX BOLT 1/4"*3/4"

CX101 TABLE PARTS BREAKDOWN

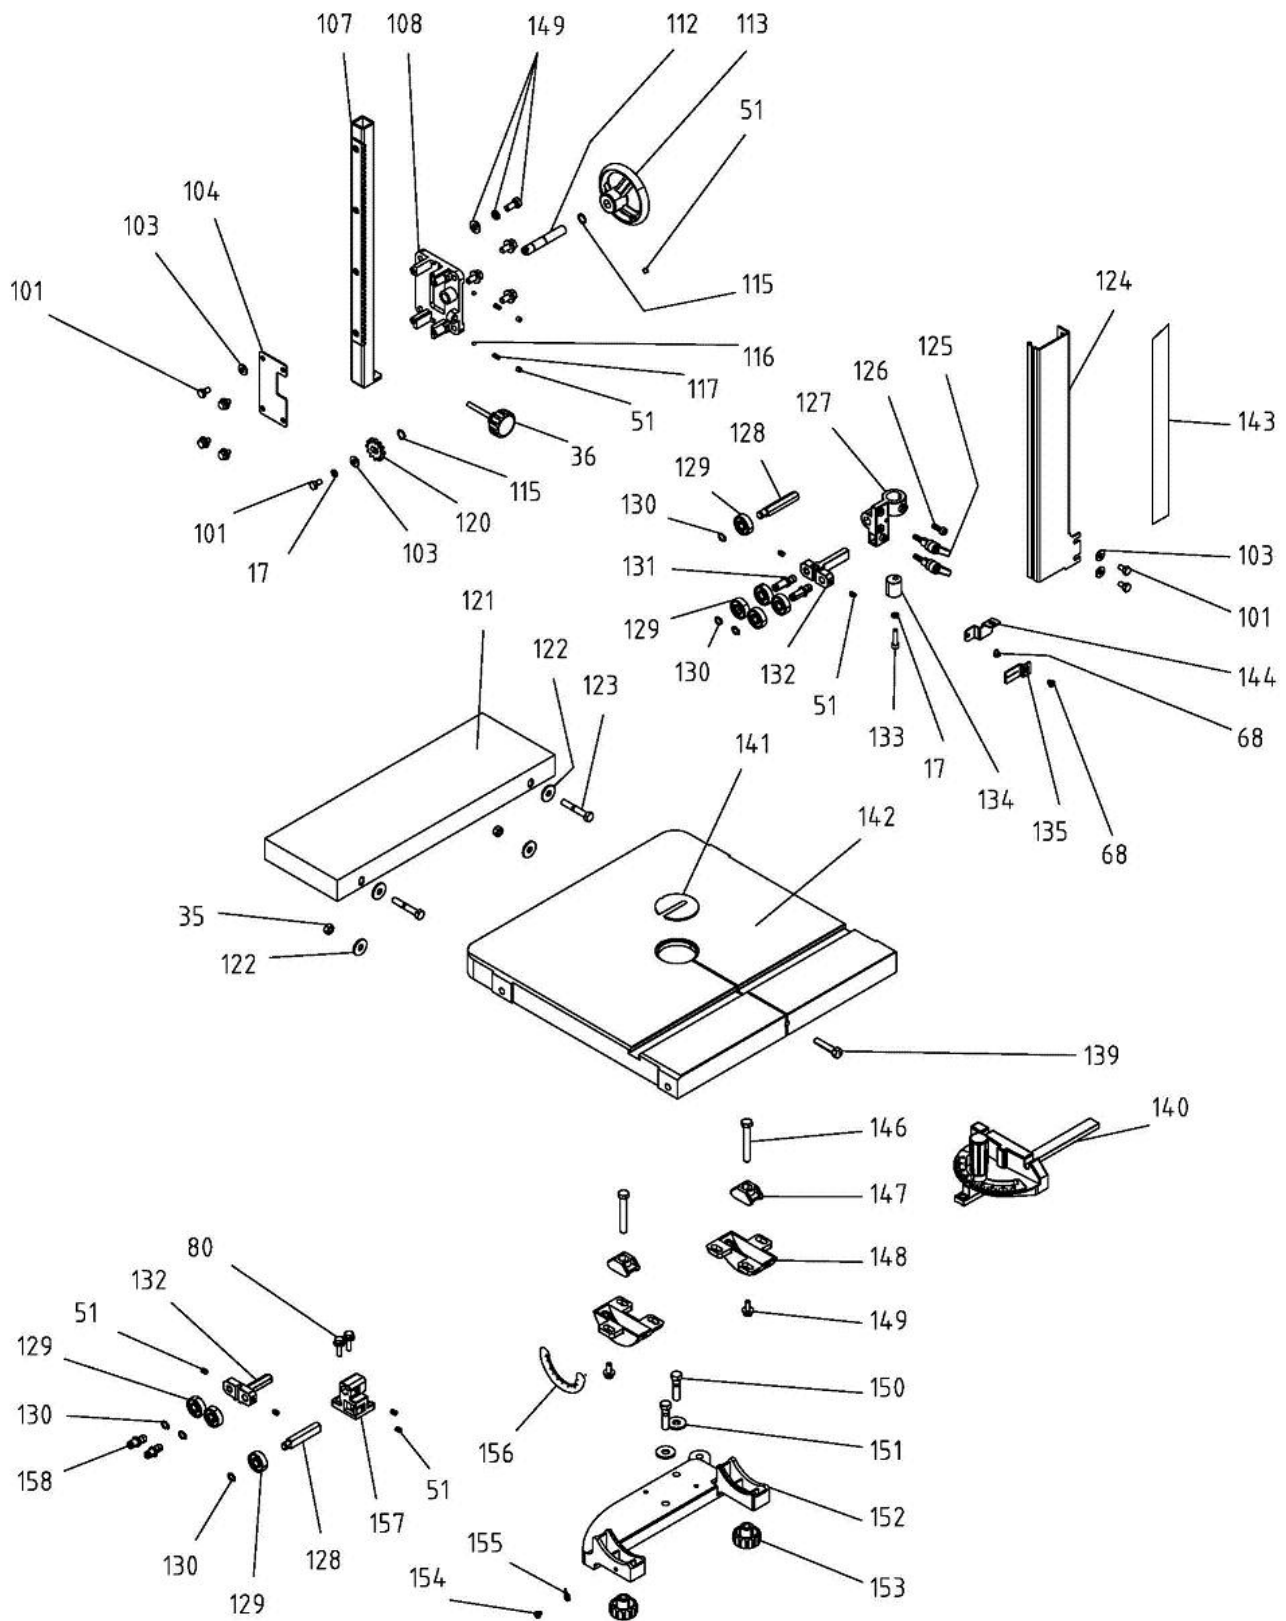


CX101 TABLE PARTS LIST

REF#	DESCRIPTION
101	HEX BOLT 1/4-20*3/8"
102	
103	FLAT WASHER 1/4"
104	GUIDE BAR COVER
105	
106	
107	GUIDE BAR
108	BRACKET
109	
110	
111	
112	PINION SHAFT
113	HANDLE
114	
115	EXTERNAL RETAINING RING S13
116	BALL
117	COMPRESSION SPRING
118	
119	
120	PINION GEAR
121	EXTENSION TABLE
122	FLAT WASHER 5/16"
123	SCREW 5/16*2
124	BLADE COVER
125	LOCKING KNOW 1/4-20*3/4
126	HEX BOLT 1/4"-20*3/8"
127	UPPER HUIDE SUPPORT BRACKET
128	SPACKING SLEEVE
129	BEARING
130	EXTERNAL RETAINING RING S10
131	GUIDE SHAFT (L)
132	SUPPORT
133	CAP SCREW
134	GUIDE POST
135	POINTER
136	
137	
138	
139	TABLE PIN

REF#	DESCRIPTION
140	MITER GAUGE ASSY
141	TABLE INSERT
142	TABLE(19MM T-SLOT)
143	GUIDE POST SCALE
144	POINTER PLATE
145	
146	BOLT HEX HD 3/8*2.5L
147	TRUNNION CLAMP SHOE
148	TRUNNION
149	HEX BOLT 5/16"*3/4"
150	HEX BOLT 3/8"*2"
151	FLAT WASHER 3/8"
152	TRUNNION SUPPORT BRACKET
153	LOCK KNOB F/TABLE
154	PHILLIPS HEAD SCREW 3/16"*1/4"
155	INDICATOR (POINTER)
156	GUAGE LABEL
157	SUPPORT BRACKET LOWER
158	BEARING SHAFT

CX101 FENCE PARTS BREAKDOWN

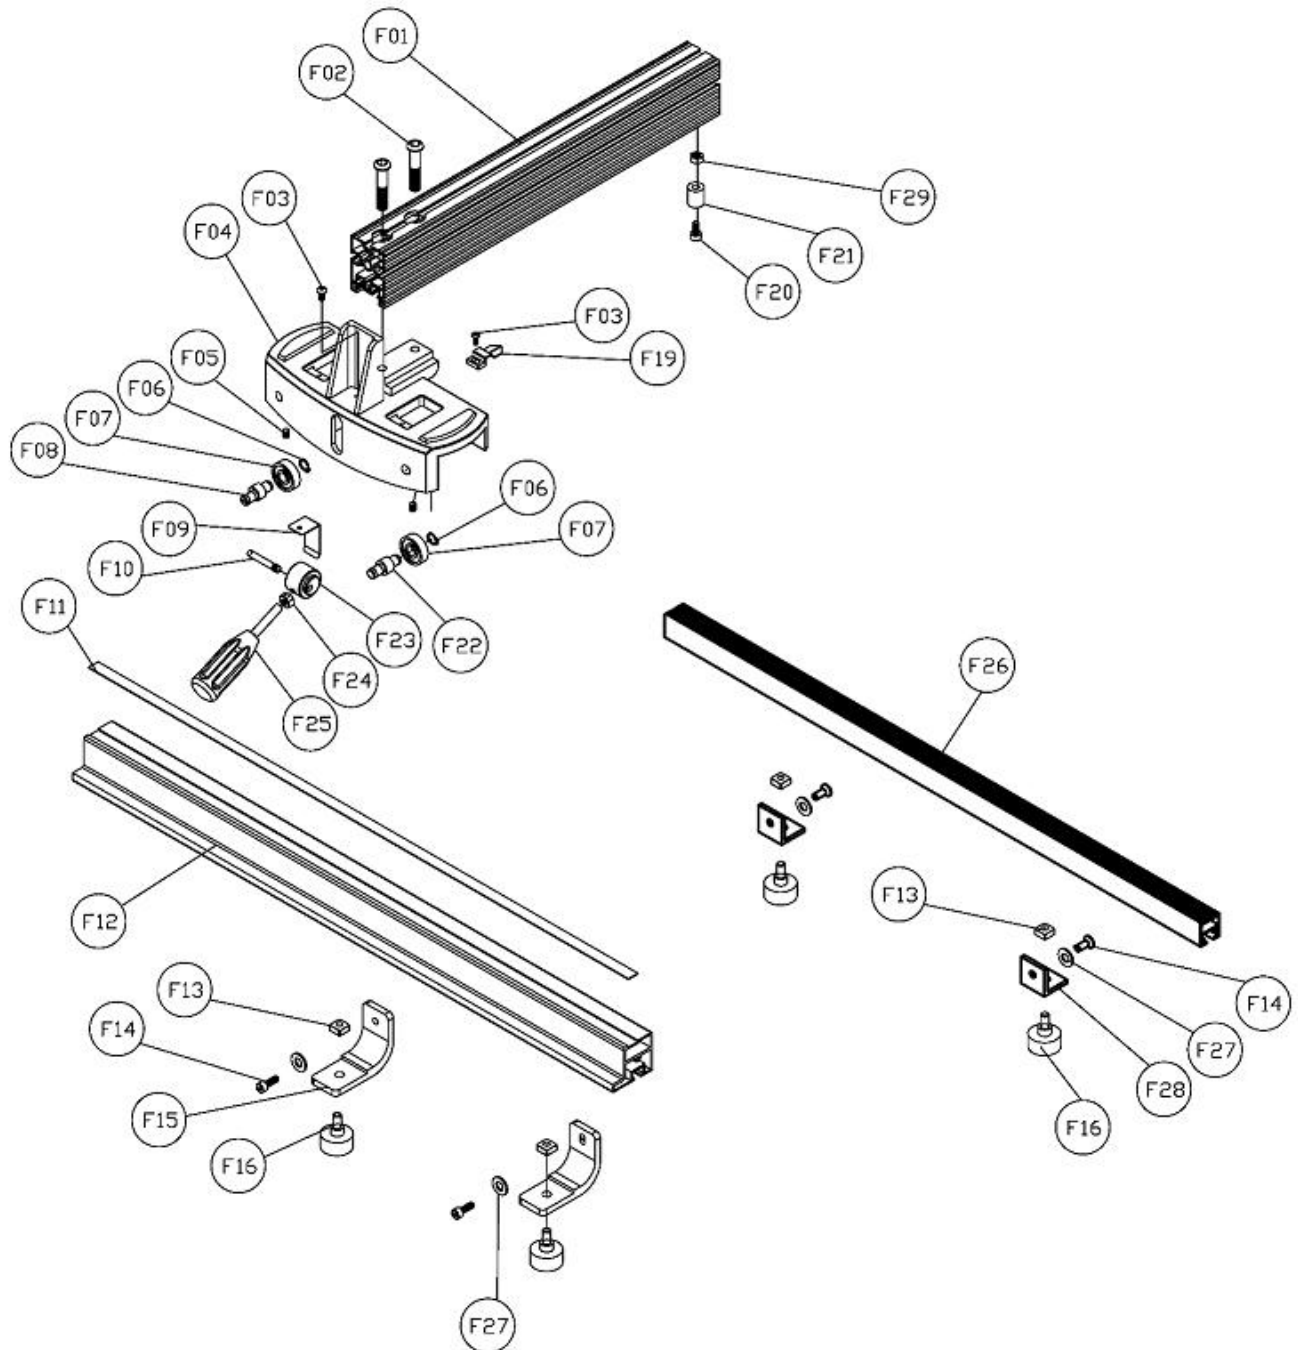

CX101 FENCE PARTS LIST

REF#	DESCRIPTION
F01	FENCE BODY
F02	CAP SCREW 10*16
F03	BUTTON HEAD SCREW 5*10MM
F04	FENCE BASE
F05	SET SCREW 1/4"*1/4"
F06	EXTERNAL RETAINING RING S10
F07	BEARING
F08	ECCENTRIC SHAFT
F09	PRESSURE PLATE
F10	PIN
F11	SCALE
F12	FENCE RAIL FRONT
F13	SQUARE NUT 5/16
F14	HEX BOLT 1/4"*1"
F15	L TYPE PLATE
F16	KNOB 5/16*5/8
F17	
F18	
F19	POINTER
F20	CAP SCREW M6*10
F21	RUNNER
F22	BEARING SHAFT
F23	LOCK MECHANISM
F24	HEX BOLT 8MM
F25	FENCE HANDLE
F26	REAR RAIL
F27	FLAT WASHER 1/4"
F28	L BRACKET
F29	HEX NUT 1/4"



WARRANTY

CRAFTEX 3 YEARS LIMITED WARRANTY

Craftex warrants every product to be free from defects in materials and agrees to correct such defects where applicable. This warranty covers **three years** for parts and 90 days for labour (unless specified otherwise), to the original purchaser from the date of purchase but does not apply to malfunctions arising directly or indirectly from misuse, abuse, improper installation or assembly, negligence, accidents, repairs or alterations or lack of maintenance.

Proof of purchase is necessary.

All warranty claims are subject to inspection of such products or part thereof and Craftex reserves the right to inspect any returned item before a refund or replacement may be issued.

This warranty shall not apply to consumable products such as blades, bits, belts, cutters, chisels, punches etceteras.

Craftex shall in no event be liable for injuries, accidental or otherwise, death to persons or damage to property or for incidental contingent, special or consequential damages arising from the use of our products.

RETURNS, REPAIRS AND REPLACEMENTS

To return, repair, or replace a Craftex product, you must visit the appropriate Busy Bee Tools showroom or call 1-800-461-BUSY. Craftex is a brand of equipment that is exclusive to Busy Bee Tools.

For replacement parts directly from Busy Bee Tools, for this machine, please call 1-800-461-BUSY (2879), and have your credit card and part number handy.

- All returned merchandise will be subject to a minimum charge of 15% for re-stocking and handling with the following qualifications.
- Returns must be pre-authorized by us in writing.
- We do not accept *collect* shipments.
- Items returned for warranty purposes must be insured and shipped pre-paid to the nearest warehouse
- Returns must be accompanied with a copy of your original invoice as proof of purchase. Returns must be in an un-used condition and shipped in their original packaging a letter explaining your reason for the return. Incurred shipping and handling charges are not refundable.
- Busy Bee will repair or replace the item at our discretion and subject to our inspection.
- Repaired or replaced items will be returned to you pre-paid by our choice of carriers.
- Busy Bee reserves the right to refuse reimbursement or repairs or replacement if a third party without our prior authorization has carried out repairs to the item.
- Repairs made by Busy Bee are warranted for 30 days on parts and labour.
- Any unforeseen repair charges will be reported to you for acceptance prior to making the repairs.
- The Busy Bee Parts & Service Departments are fully equipped to do repairs on all products purchased from us with the exception of some products that require the return to their authorized repair depots. A Busy Bee representative will provide you with the necessary information to have this done.
- For faster service it is advisable to contact the nearest Busy Bee location for parts availability prior to bringing your product in for repairs.