



**CXP03**  
**1/2-HP FOUR SPEEDS**  
**POWER FEEDER**  
**User Manual**



# TABLE OF CONTENTS

General Safety Instructions for Machines .....	3
CXP03 Specific Safety Instructions.....	4
CXP03 Features .....	5
Physical Features .....	6
Un-Packing .....	7
Power Feeder Positions.....	7
Mounting .....	8
Assembly .....	8
Power Connection & Grounding.....	9
Speed Changes .....	9
Feed Rate Settings .....	10
Maintenance .....	11
Roller Replacement .....	11
Lubricating the Rollers .....	11
Gear and Chains.....	11
Gear Box.....	11
Cleaning.....	11
Parts Breakdown and Parts List.....	12 - 16
Warranty .....	17

# GENERAL SAFETY INSTRUCTIONS FOR MACHINES

Extreme caution should be used when operating all power tools. Know your power tool, be familiar with its operation, read through the owner's manual and practice safe usage procedures at all times.

- ❖ **ALWAYS** read and understand the user manual before operating the machine.
- ❖ **CONNECT** your machine **ONLY** to the matched and specific power source.
- ❖ **ALWAYS** wear safety glasses respirators, hearing protection and safety shoes, when operating your machine.
- ❖ **DO NOT** wears loose clothing or jewelry when operating your machine. Wear protective hair covering.
- ❖ **A SAFE ENVIRONMENT** is important. Keep the area free of dust, dirt and other debris in the immediate vicinity of your machine.
- ❖ **BE ALERT! DO NOT** use prescription or other drugs that may affect your ability or judgment to safely use your machine.
- ❖ **DISCONNECT** the power source when changing drill bits, hollow chisels, router bits, shaper heads, blades, knives or making other adjustments or repairs.
- ❖ **NEVER** leave a tool unattended while it is in operation.
- ❖ **NEVER** allow unsupervised or untrained person to operate the machine
- ❖ **NEVER** reach over the table when the tool is in operation.
- ❖ **ALWAYS** keep blades, knives and bits sharpened and properly aligned.
- ❖ **ALL OPERATIONS MUST BE** performed with the guards in place to ensure safety.
- ❖ **ALWAYS** use push sticks and feather boards to safely feed your work through the machine.
- ❖ **ALWAYS** make sure that any tools used for adjustments are removed before operating the machine.
- ❖ **ALWAYS** keep bystanders safely away while the machine is in operation.
- ❖ **NEVER** attempt to remove jammed cutoff pieces until the blade has come to a full stop.

## CXP03 POWER FEEDER SPECIFIC SAFETY INSTRUCTIONS

- ❖ **ALWAYS READ** and understand the user manual before operating the power feeder.
- ❖ **MAKE SURE** the cutting tools are rotating at the operating speed before feeding the work-piece into the cutter.
- ❖ **NEVER OVERLOAD** the cutting tool by feeding too quickly. The tool will perform better and be safer at the rate for which it is designed.
- ❖ **KEEP YOUR FINGERS** away from the rotating parts. Make sure hands and clothing are safely away from the rotating parts or the work-piece.
- ❖ **DO NOT FEED** long work-pieces without providing proper support at the out-feed end of the table.
- ❖ **ALWAYS STOP** the feeder first, then the machine.
- ❖ **MAKE SURE** before making any adjustments, the switch is in the “OFF” position and the cord is un-plugged from the power source.
- ❖ **BEFORE OPERATING** your power feeder, make sure you have read and understood all the safety instructions in this manual and you are familiar with your feeder. If you fail to do so, serious injury could occur.

### **WARNING**

*The safety instructions given above can not be complete because the environment in every shop is different. Always consider safety first as it applies to your individual working conditions.*




## **CXP03 POWER FEEDER** **FEATURES**

### **MODEL CXP03 – 1/2-HP FOUR SPEED POWER FEEDER**

As part of the growing line of Crafttex woodworking equipment, we are proud to offer the CXP02, A 1/2-HP Four Speed Power Feeder. The Crafttex name guarantees Craft Excellence. By following the instructions and procedures laid out in this user manual, you will receive years of excellent service and satisfaction. The CXP02 is a professional tool and like all power tools, proper care and safety procedures should be adhered to.

- ❖ Motor ..... 1/2-HP, 220-Volts, Single Phase, 60-Hz, 1700-RPM
- ❖ Power Transfer ..... Gear Box
- ❖ Number of Speeds..... Four
- ❖ Feed Speeds ..... 20, 26, 33, 43 FPM
- ❖ Swing..... 360-Degree
- ❖ Vertical Movement..... 10-1/4"
- ❖ Horizontal Movement..... 16-3/8"
- ❖ Feed Direction ..... Forward and Reverse
- ❖ Number of Rollers..... Three
- ❖ Roller Width..... 2"
- ❖ Roller Diameter..... 4"
- ❖ Roller Construction ..... Synthetic Rubber
- ❖ Housing Construction ..... Cast Aluminum
- ❖ Column Construction ..... Steel
- ❖ Paint ..... Powder Coated Paint
- ❖ Length/Width/Height ..... 45" x 18" x 28-1/2"
- ❖ Weight ..... 105 lbs
- ❖ Warranty ..... 3 Years

# CXP02 1/2-HP POWER FEEDER PHYSICAL FEATURES

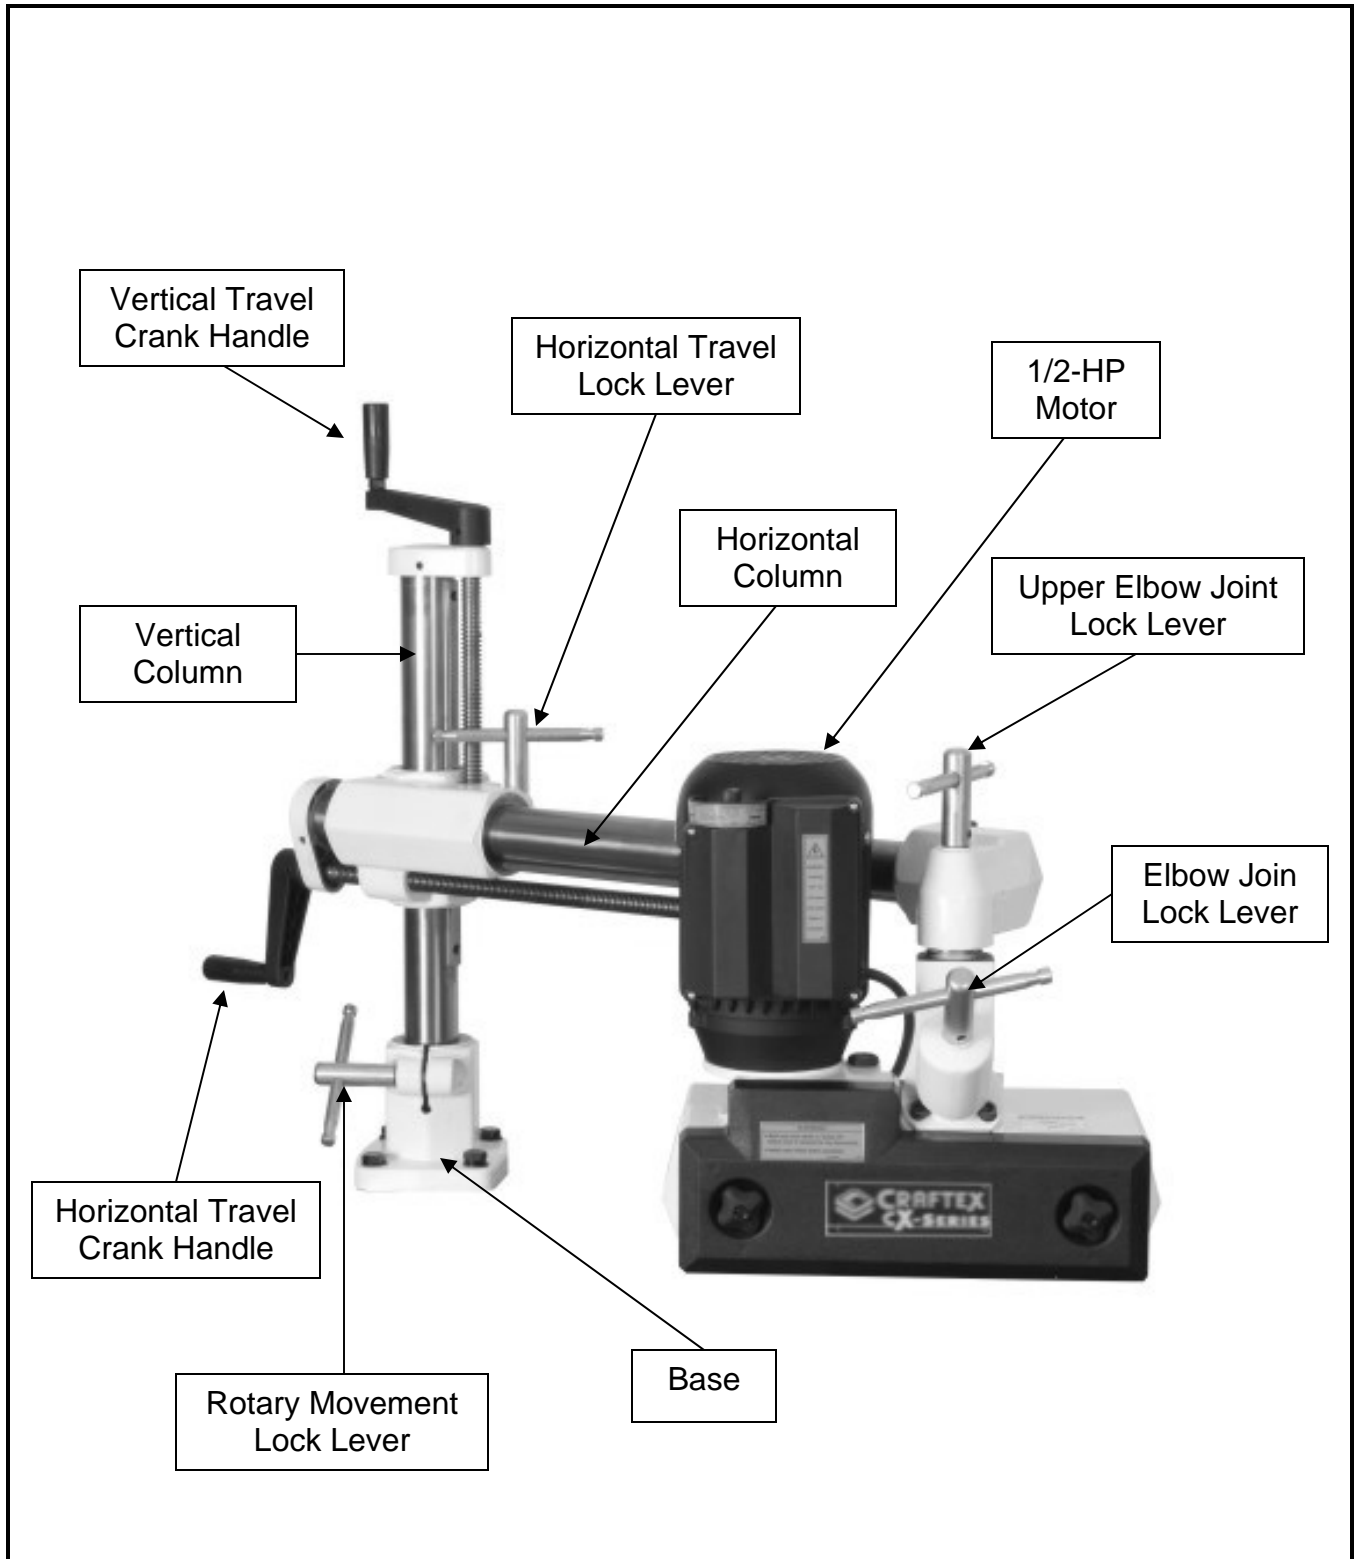

## UNPACKING

The power feeder is properly packaged and shipped completely in a box for safe transportation. When unpacking, carefully inspect the box and ensure that nothing has been damaged during transit.

Open the box and check that the power feeder and the parts are in good condition.

## POWER FEEDER POSITIONS

Position the power feeder on the table top of your machine to determine where to drill the base mounting holes so that you minimize the power feeder swing and adjustments.

The figure below shows the power feeder mounting position on a table saw, a jointer and a shaper.

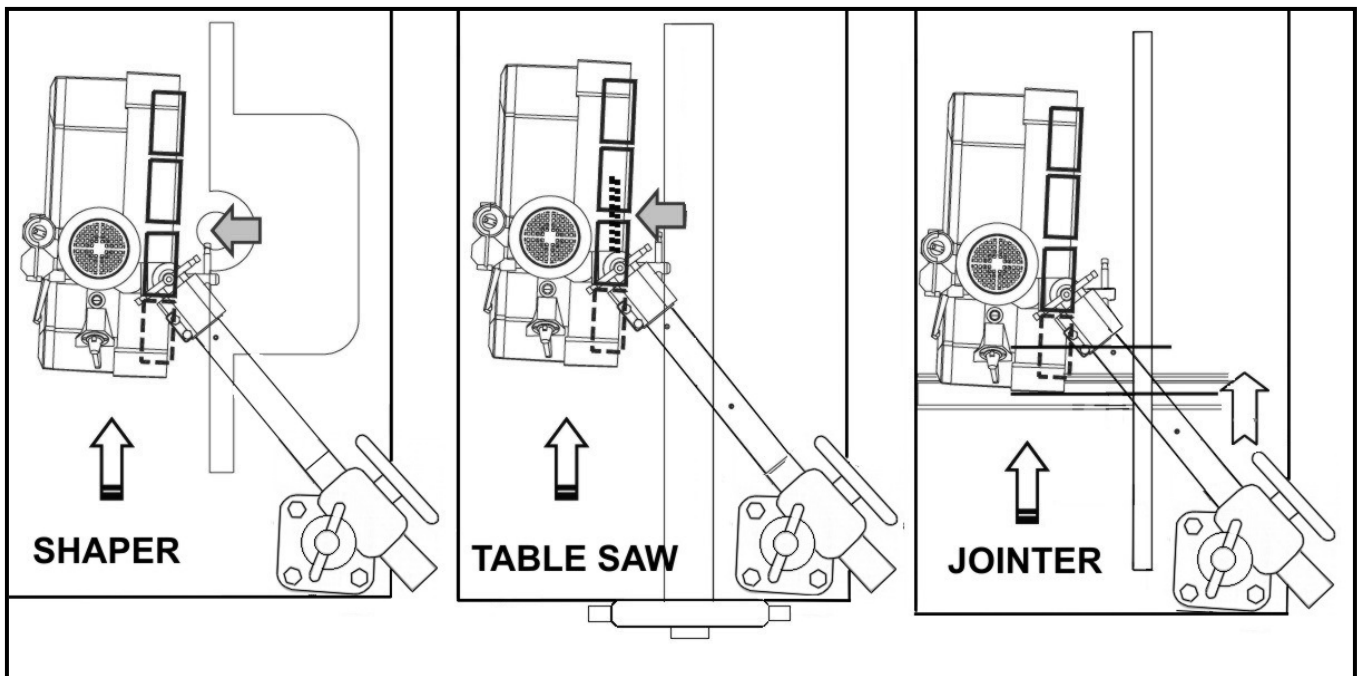


Figure-1 Power feeder mounting position on a shaper, table saw and jointer

## MOUNTING

Place the power feeder base on the table surface where you want to mount the power feeder. Mark the 4 holes on the table surface through the holes on the base using a center punch. Remove the base, drill and tap 4 holes on the table surface.

Mount the base on the table surface using 4 sets of bolts and spring washers (not provided). Make sure the bolts are longer than the mounting base thickness plus the table top thickness.

## ASSEMBLY

Insert the vertical column assembly into the base opening and tighten the lock lever as shown in figure-2.

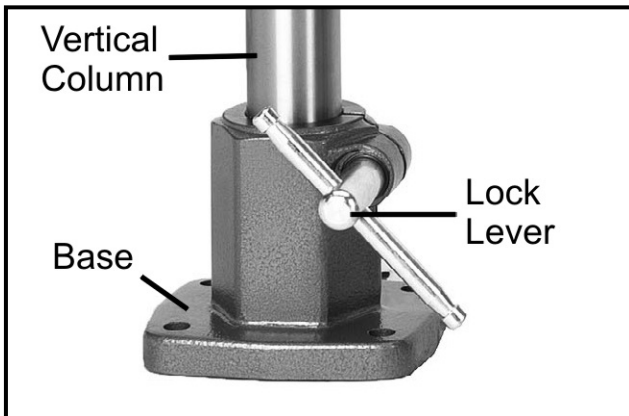


Figure-2 Vertical column secured into the base opening

Now slide the horizontal column assembly into the elevating bracket as shown in figure-3.

Slide the elevating bracket with the horizontal column onto the vertical column as shown in figure-3 and tighten the levers.

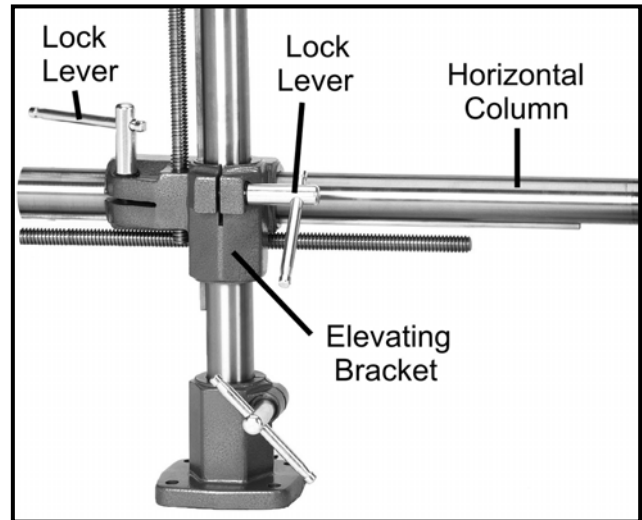


Figure-3 Horizontal column and elevating bracket assembly

Now attach the column caps on the top of the vertical column and to the left end of the horizontal column and secure it using set screws (provided) as shown in figure-4.

Install the crank handles assemblies on to the vertical and horizontal column caps and secure it using screws provided. See figure-4.

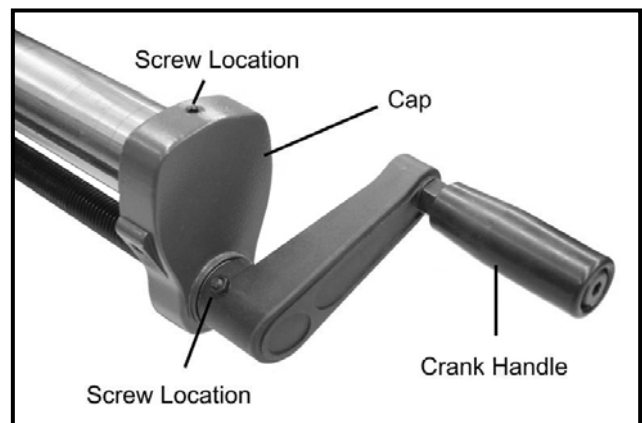


Figure-4 Installing the column cap and crank handle assembly

Slide the elbow joint with the power feeder assembly on to the horizontal column as shown in figure-5 and tighten the screw to secure the elbow to the column.

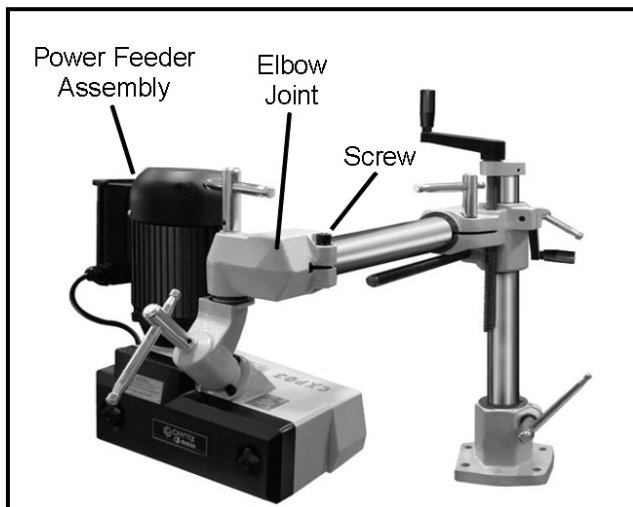


Figure-5 Attaching the power feeder assembly to the horizontal column

## POWER CONNECTION & GROUNDING

Feeder is a supplemental tool, which works in conjunction with your shaper, table saw or jointer etc. It's recommended to be used with a machine that is wired in compliance with your national or local electrical regulation.

Make sure that the appliance is connected to an outlet having the same configuration as the plug. If an adaptor plug is used, it must be attached to the metal screw of the receptacle.

## SPEED CHANGES

The CXP03 is a four speed power feeder and the feed rates are; 9.5, 15, 25 and 38 feet per minute.

To change the speed of your power feeder:

Make sure the switch is in the OFF position and cord is disconnected from the power source.



Figure-6 Forward/Reverse Switch in the OFF position

Look at the feed rate list below and select the right feed rate required. The feed rate table is also attached to the inside of the gears cover of the power feeder.

<div style="display: flex; align-items: center; justify-content: center;"> <div style="border: 1px solid black; border-radius: 50%; width: 40px; height: 40px; margin-right: 10px; display: flex; align-items: center; justify-content: center;">A</div> <div style="border: 1px solid black; border-radius: 50%; width: 20px; height: 20px; margin-right: 10px; display: flex; align-items: center; justify-content: center;">B</div> </div>	GEARS	SPEED / Min
	A(20) + B(40)	9.5 FT (2.9M)
	A(40) + B(20)	15 FT (4.6M)
	A(26) + B(34)	25 FT (7.6M)
	A(34) + B (26)	38 FT (11.6M)

Remove the gears cover on your machine by un-screwing the knob securing the cover.

Remove the two hex nuts securing the gears and remove the chain and the gears.

Take a look at the feed rate table given on page-9 and install the gears as instructed to achieve the required speed.

Re-install the hex nuts.

Make sure the gear hubs are facing in towards the power feeder. See figure-7.

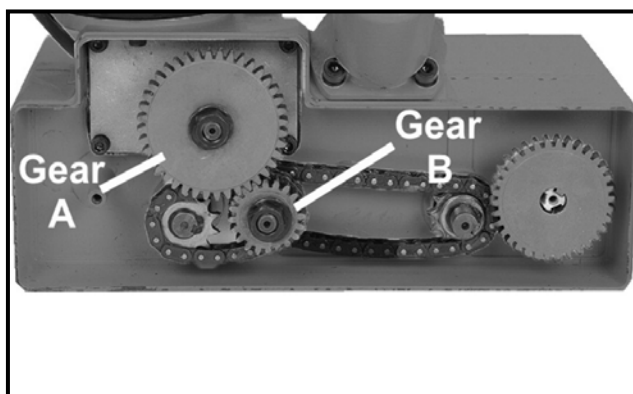


Figure-7 Change gears

## FEED RATE SETTINGS

Choosing the right feed rate is important to achieve efficiency and quality. It is closely related to the speed of your machine, the sharpness of cutter, the hardness and the thickness of the material to be cut.

Feed rate chart below is for reference only.

Feeding speed Thickness of work piece	Spindle Speed			Cutters
	6000 R.P.M.	8000 R.P.M.	10000 R.P.M.	
6 mm	9	15	23	9
10 mm	8	12	15	8
20 mm	5	9	12	6
25 mm	3	5	6	5

## MAINTENANCE

During the life of your tool, you will need to practice some regular maintenance to keep your feeder in peak performance condition.

### WARNING

*When installing / removing and servicing any part of the machine, make sure the power switch is in the off position and the cord is disconnected from the power source. Failure to do so may result in serious personal injury or death.*

## ROLLER REPLACEMENT

Turn the switch to OFF position and un-plug the cord from the power source.

Remove the screws securing the rollers and replace the rollers with the new ones.

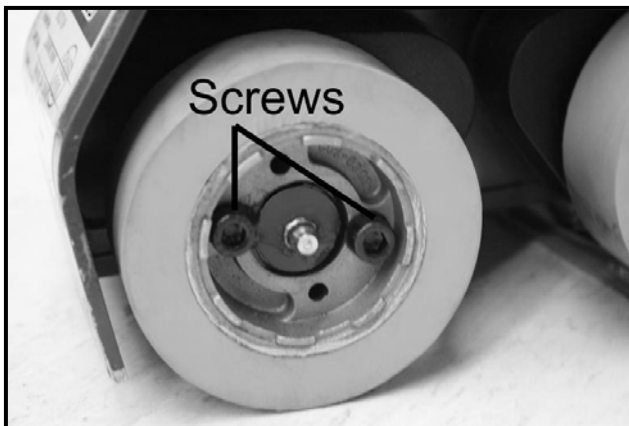


Figure-8 Removing the screws securing the roller

Remember that, rotating the roller positions periodically will prolong the life of rollers.

## LUBRICATING THE ROLLERS

Using a grease gun, apply a thin layer of grease after every 200 hours or 30 days into the fittings.

## GEARS AND CHAINS

Lubricate the gears and chains periodically with grease.

## GEAR BOX

Change the gear box oil after every 1000 hours or 6 months, if you are using your power feeder 8 hours every day.


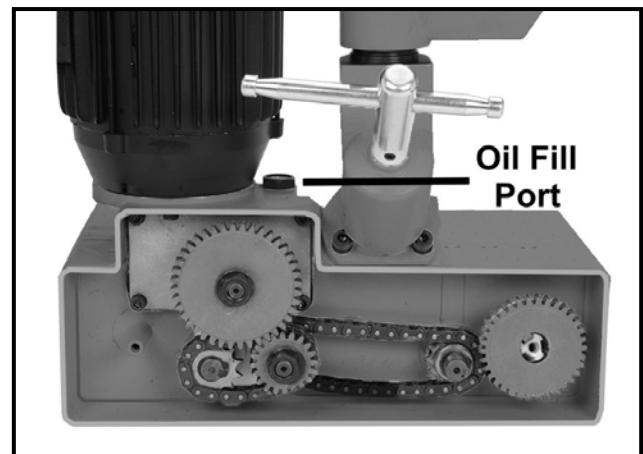


Figure-9 Gear box oil fill port

## CLEANING

Dust build up around the motor can decrease the life of the motor. Make sure the motor and the rollers remain free and clear of all dust and debris build up.

# CXP03 STAND PARTS BREAKDOWN

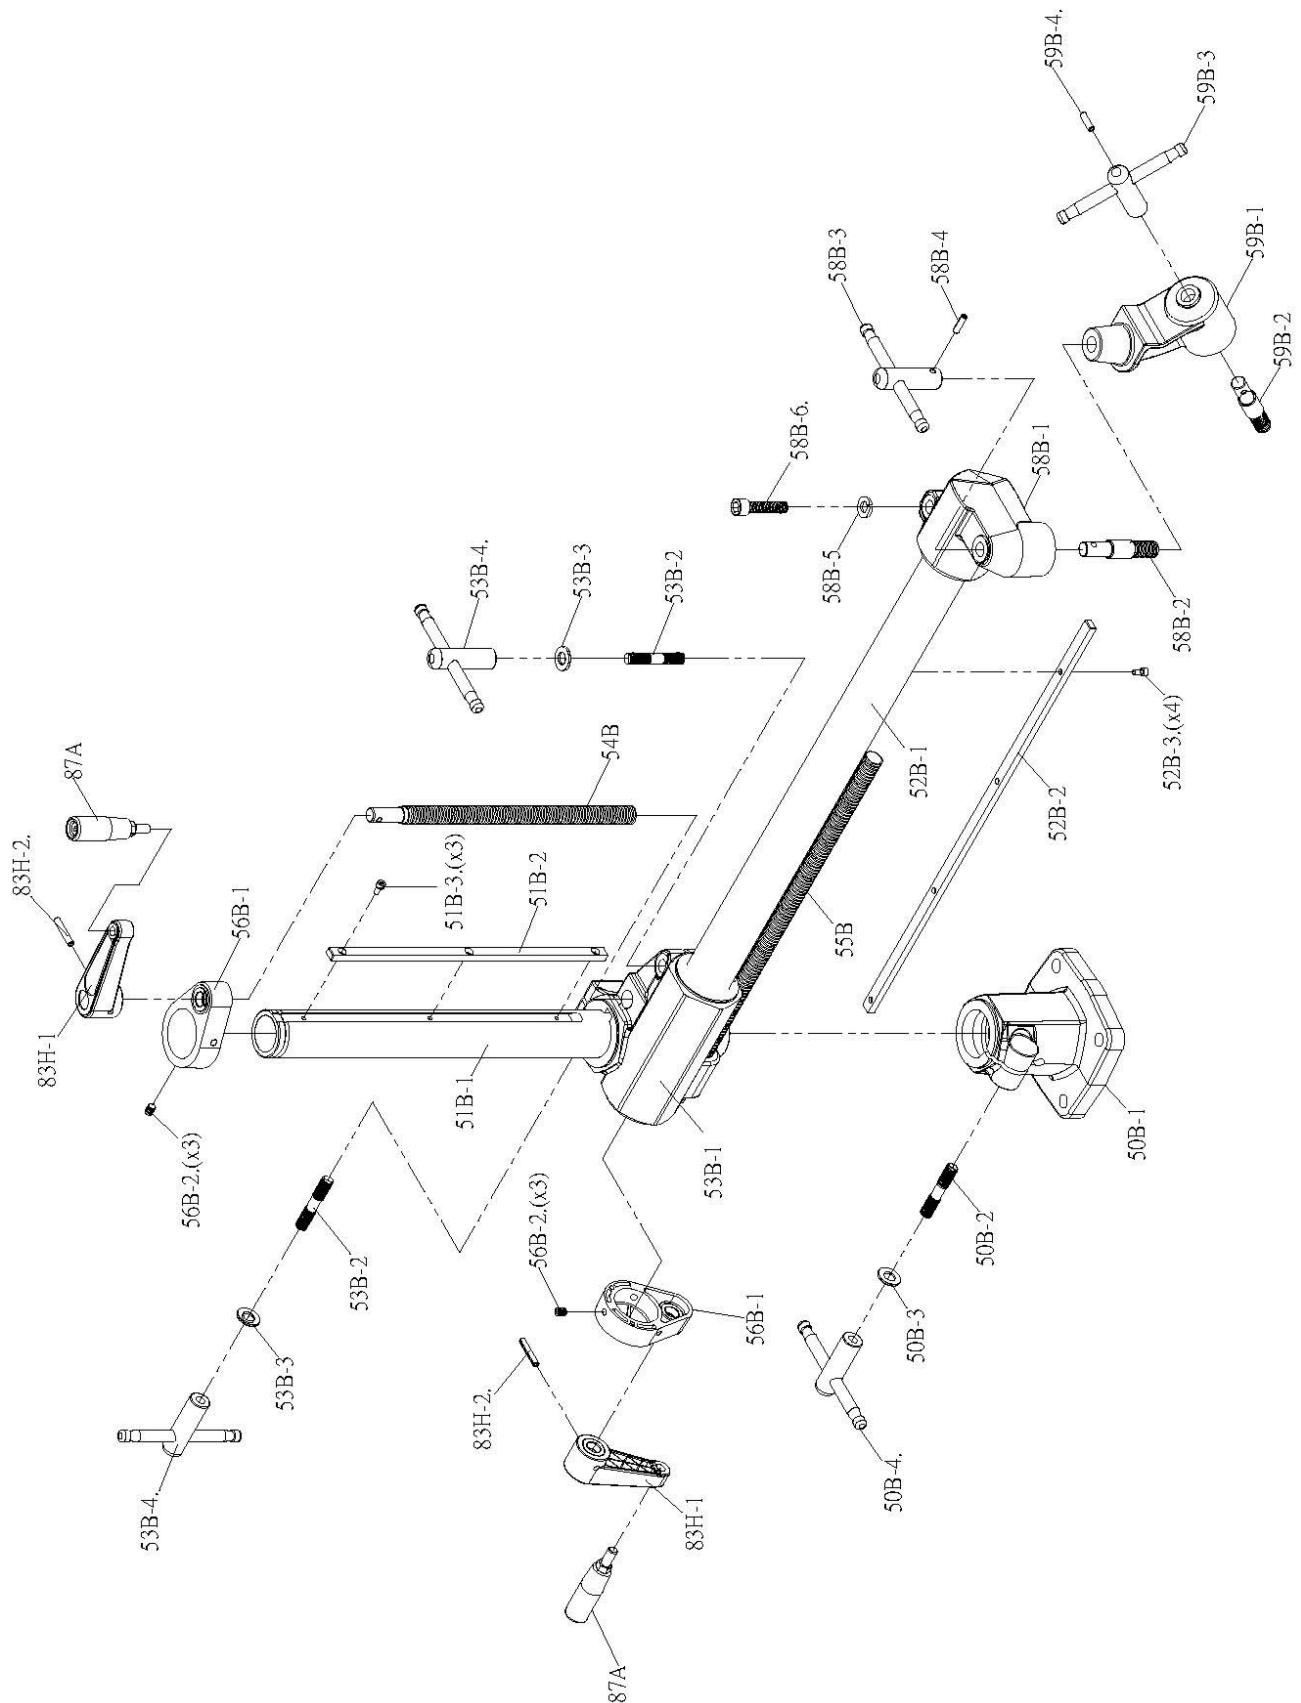


## CXP03 STAND PARTS LIST

Part No.	Description	Qty
#6003	Bearing (#6003)	1
#6203	Bearing (#6203)	1
01B	Sprocket Case Kit - Right	
01B-1	Grease Nipple	1
01B-2	Case Sprocket	1
01B-3	Spring	1
01B-4	Case Cover	1
01B-5*	Screw	2
02B	Sprocket Case Kit - Left	
02B-1	Grease Nipple	1
02B-2	Case Sprocket	1
02B-3	Spring	1
02B-4	Case Cover	1
02B-5*	Screw	2
03B	Roller Supporter Kit	
03B-1	Roller Base	1
03B-2	Sprocket	1
03B-3	Spring Washer	2
03B-4	Screw	2
03B-5	Spring Washer	2
03B-6*	Screw	2
04B	Chain (22S, 4PCs/Set)	4
05B	Tube Kit	
05B-1	Tube	1
05B-2*	Snap Ring	1
06B	Transmission kit	
06B-1	Sprocket Shaft	1
06B-2*	Snap Ring	1
07B	Sprocket Shaft Kit	
07B-1	Sprocket Shaft	1
07B-2	Washer	1
07B-3*	Nut	1
08B	Spindle Kit	
08B-1	Grease Nipple	1
08B-2	Spindle	1
08B-3	Spring Washer	1
08B-4*	Nut	1
09B	Frame Kit (308)	
09B-1	Frame	1
09B-2	Bushing	1
09B-3*	Set Screw	3

10B	Frame Kit (408)	
10B-1	Frame	1
10B-2	Bushing	1
10B-3*	Set Screw	4
12B	Front Cover Kit (408)	1
13B	Swivel Cone Kit (308)	
13B-1	Cone	1
13B-2	Spring Washer	3
13B-3*	Screw	3
14B	Transmission Kit (308)	
14B-1	Sprocket	1
14B-2	sprocket	3
14B-3	Sprocket Collar	1
14B-4	Chain (36S)	1
14B-5*	Chain (22S)	1
15B	Transmission Kit (408)	
15B-1	Sprocket	2
15B-2	sprocket	4
15B-3	Sprocket Collar	1
15B-4	Chain (52S)	2
15B-5*	Chain (26S)	1
16B	Worm Gear Shaft Kit - 50Hz	
16B-1	Worm Gear	1
16B-2	Worm gear Spindle	1
16B-3	Key	1
16B-4	Washer	1
16B-5*	Nut	1
17B	Worm Gear Shaft Kit - 60Hz	
17B-1	Worm Gear	1
17B-2	Worm gear Spindle	1
17B-3	Key	1
17B-4	Washer	1
17B-5*	Nut	1
18A	Knob	2
18B	Worm Gear Box Cover (308)	1
18B-1	Oil Seal	1
18B-2	Worm Cape	1
18B-3	Oil Seal	1
18B-4*	Screw	4
19B	Gear kit -20T, 40T	
19B-1	Gear (20T)	1
19B-2*	Gear (40T)	1

20B	Gear kit -26T, 34T	
20B-1	Gear (34T)	1
20B-2*	Gear (26T)	1
21A	Oil Cape Kit	
21A-1	Oil Cape	1
21A-2*	"O" Ring	1
25B1	Motor 1 Ph without Switch	
25B3	Motor 3 Ph without Switch	
26B	Switch Kit	1
36A	"O" Ring	1
46A	Switch Box	1
59A	Worm Gear Box Kit (408)	
59A-1	"O" Ring	1
59A-2	Worm Cape	1
59A-3	Oil Seal	1
59A-4*	Screw	3
RO-10-1	Rollers (100Dia x 50, Pcs)	3/4

# CXP03 HOUSING PARTS BREAKDOWN

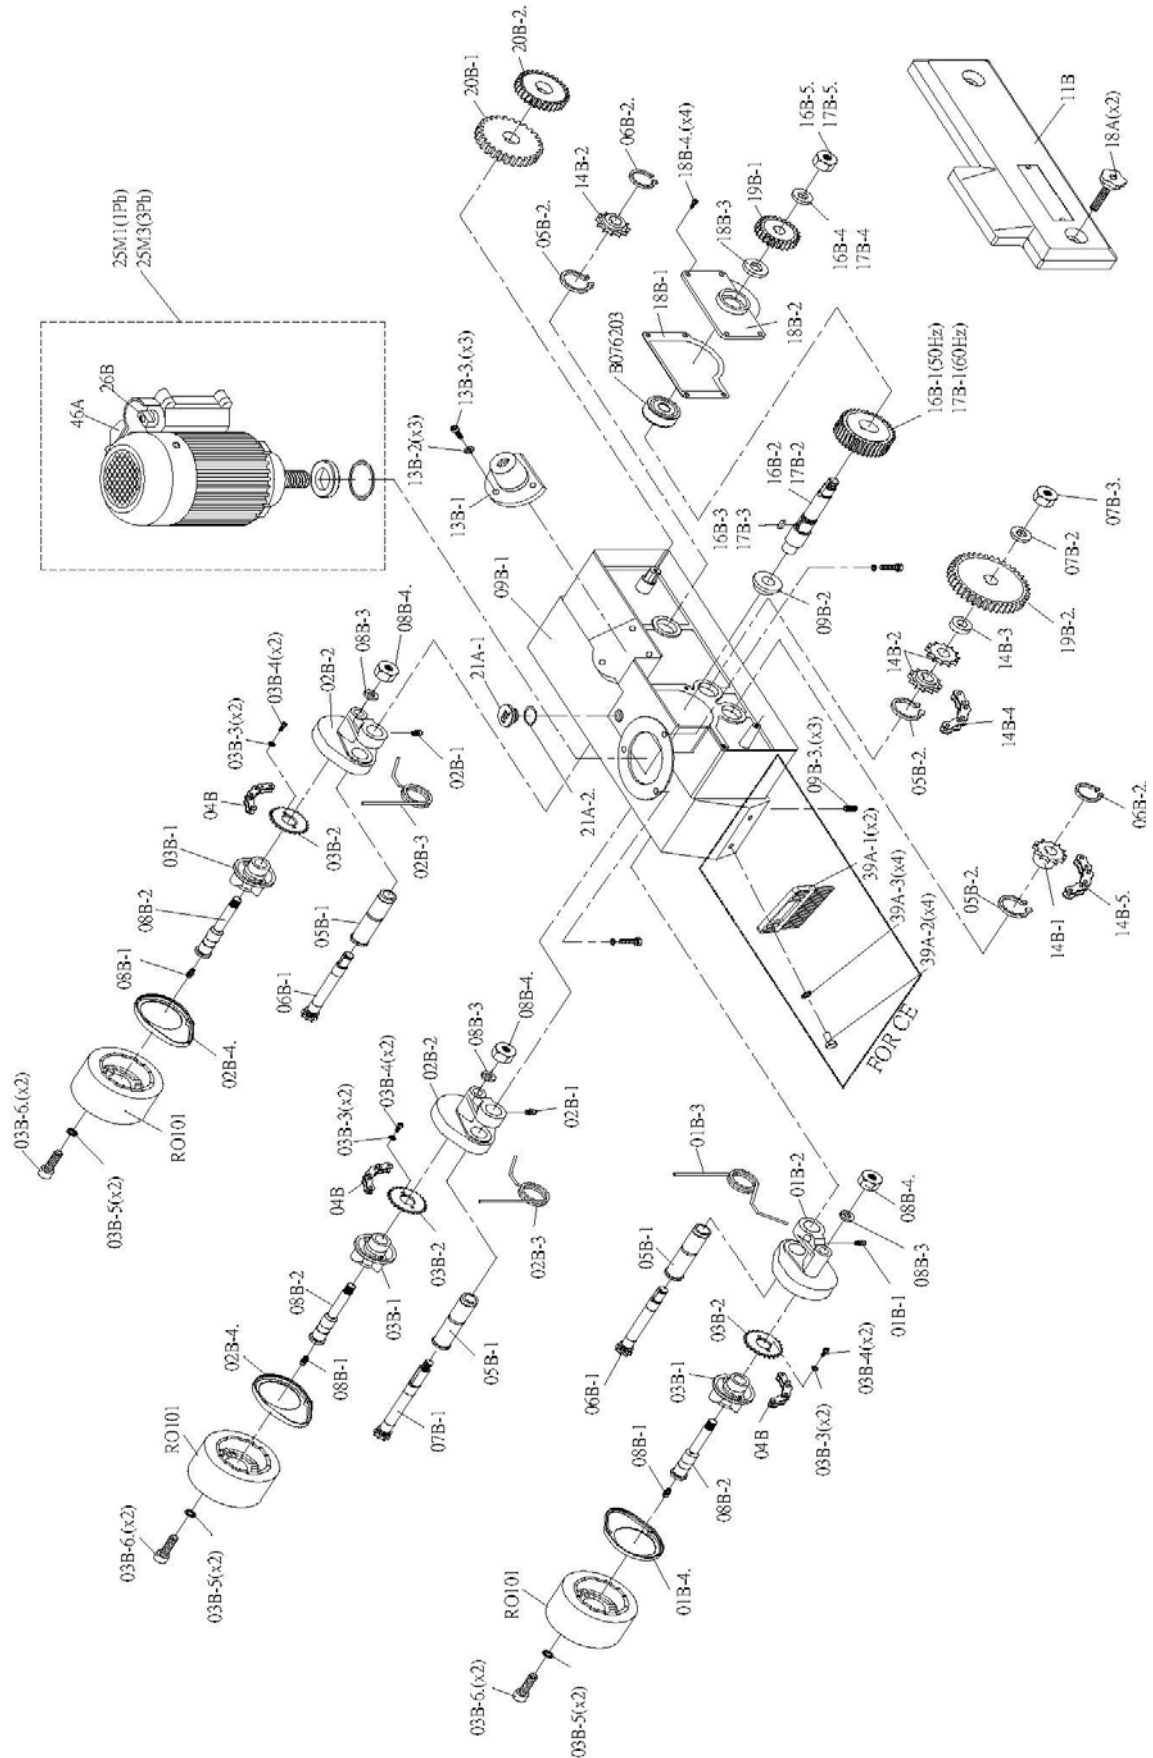

## CXP03 HOUSING PARTS LIST

Part No.	Description	Q'ty
50B	Base Kit (308/408)	
50B-1	Column Base	1
50B-2	Stud	1
50B-3	Washer	1
50B-4	Lever	1
51B	Vertical Column Kit	
51B-1	Column, Vertical	1
51B-2	Key	1
51B-3*	Screw	3
52B	Over Arm Kit (308/408)	
52B-1	Over Arm	1
52B-2	Key	1
52B-3*	Screw	4
53B	Elevating Bracket Kit	
53B-1	Elevating Bracket	1
53B-2	Stud	2
53B-3	Washer	2
53B-4*	Handle	2
54B	Elevating Screw Kit	1
55B	Pinion Kit	1
56B	Column Cape kit	
56B-1	Column Cap	1
56B-2*	Set Screw	3
57B	Over Arm Cone Kit (408)	
57B-1	Over Arm Cone (408)	1
57B-2	Lock Stud	1
57B-3	Lever	1
57B-4	Lock Pin	1
57B-5	Washer	1
57B-6*	Screw	1
58B	Over Arm Cone Kit	
58B-1	Over Arm Cone	1
58B-2	Lock Pin	1
58B-3	Lever	1
58B-4	Lock Pin	1
58B-5	Washer	1

58B-6*	Screw	1
59B	Swivel Cone Kit (308)	
59B-1	Swivel Cone (308)	1
59B-2	Lock Stud	1
59B-3	Lever	1
59B-4*	Lock Pin	1
60B	Cape Screw Wrench	1
86A	Hand Wheel Kit	
86A-1	Hand Wheel	1
86A-2*	Lock Pin	1
87A	Wheel Handle	1



## **WARRANTY**

### **CRAFTEX 3 YEARS LIMITED WARRANTY**

Craftex warrants every product to be free from defects in materials and agrees to correct such defects where applicable. This warranty covers **three years** for parts and 90 days for labor (unless specified otherwise), to the original purchaser from the date of purchase but does not apply to malfunctions arising directly or indirectly from misuse, abuse, improper installation or assembly, negligence, accidents, repairs or alterations or lack of maintenance.

*Proof of purchase is necessary.*

All warranty claims are subject to inspection of such products or part thereof and Craftex reserves the right to inspect any returned item before a refund or replacement may be issued.

This warranty shall not apply to consumable products such as blades, bits, belts, cutters, chisels, punches etceteras.

Craftex shall in no event be liable for injuries, accidental or otherwise, death to persons or damage to property or for incidental contingent, special or consequential damages arising from the use of our products.

### **RETURNS, REPAIRS AND REPLACEMENTS**

To return, repair, or replace a Craftex product, you must visit the appropriate Busy Bee Tools showroom or call 1-800-461-BUSY. Craftex is a brand of equipment that is exclusive to Busy Bee Tools.

For replacement parts directly from Busy Bee Tools, for this machine, please call 1-800-461-BUSY (2879), and have your credit card and part number handy.

- All returned merchandise will be subject to a minimum charge of 15% for re-stocking and handling with the following qualifications.
- Returns must be pre-authorized by us in writing.
- We do not accept *collect* shipments.
- Items returned for warranty purposes must be insured and shipped pre-paid to the nearest warehouse
- Returns must be accompanied with a copy of your original invoice as proof of purchase. Returns must be in an un-used condition and shipped in their original packaging a letter explaining your reason for the return. Incurred shipping and handling charges are not refundable.
- Busy Bee will repair or replace the item at our discretion and subject to our inspection.
- Repaired or replaced items will be returned to you pre-paid by our choice of carriers.
- Busy Bee reserves the right to refuse reimbursement or repairs or replacement if a third party without our prior authorization has carried out repairs to the item.
- Repairs made by Busy Bee are warranted for 30 days on parts and labour.
- Any unforeseen repair charges will be reported to you for acceptance prior to making the repairs.
- The Busy Bee Parts & Service Departments are fully equipped to do repairs on all products purchased from us with the exception of some products that require the return to their authorized repair depots. A Busy Bee representative will provide you with the necessary information to have this done.
- For faster service it is advisable to contact the nearest Busy Bee location for parts availability prior to bringing your product in for repairs.